



Equator-X magnetic part temperature sensor (A-6620-1400)

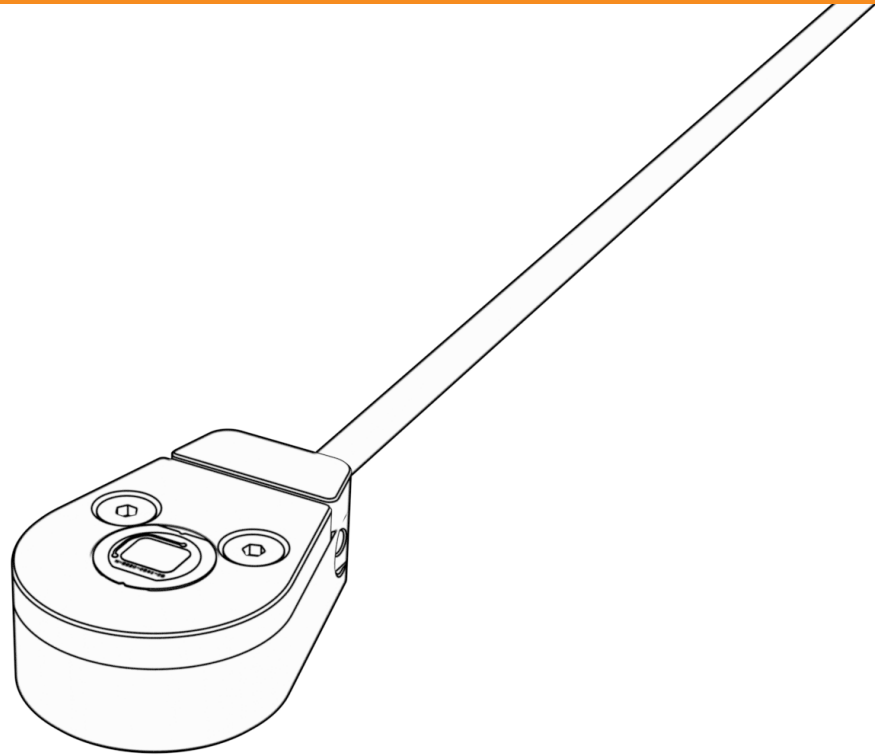

Introduction

The Equator-X magnetic part temperature sensor is used to measure the temperature of parts on the Equator-X system. The following information will help to get the best performance from the sensor:



1. For best accuracy, the contact surface on the part should be flat and smooth.
2. The sensor can be installed on a vertical, horizontal or angled contact surface on the part.
3. The contact surface on the part must be in contact with the sensor pad.

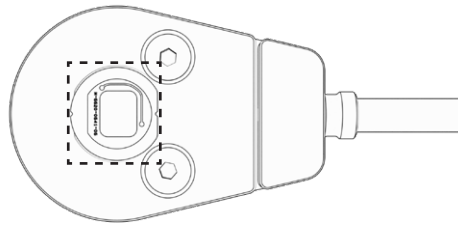



Kit contents




Magnetic part temperature sensor x1

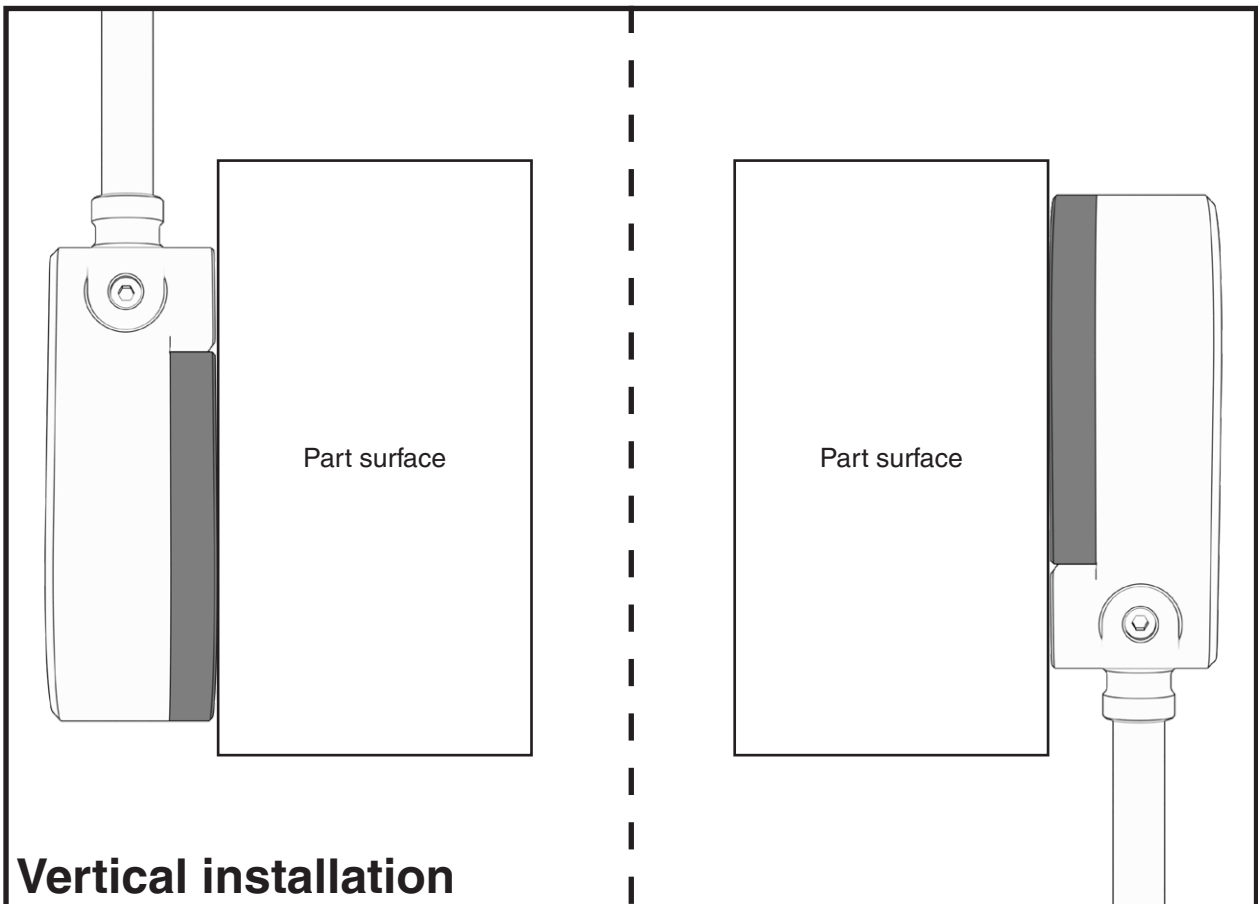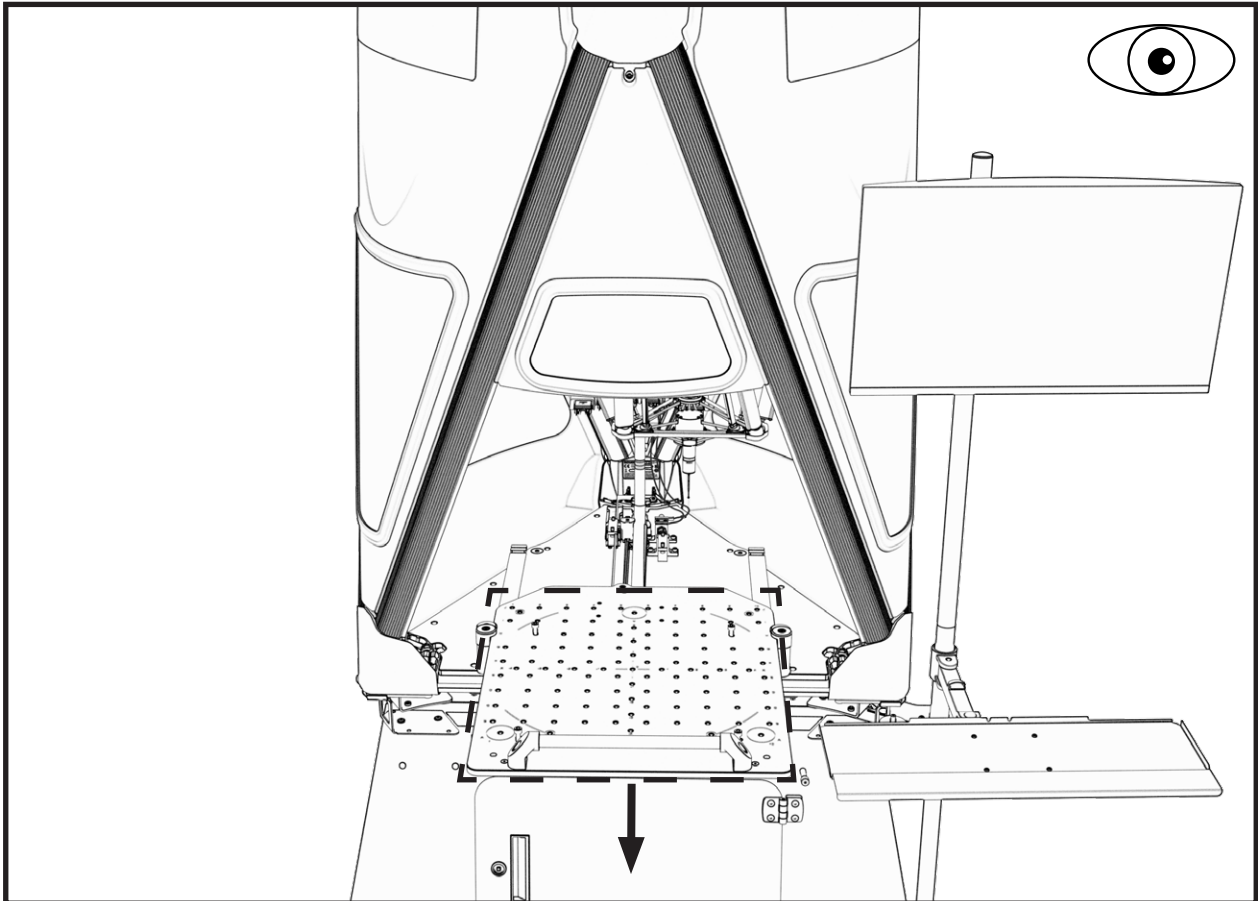


Vertical installation

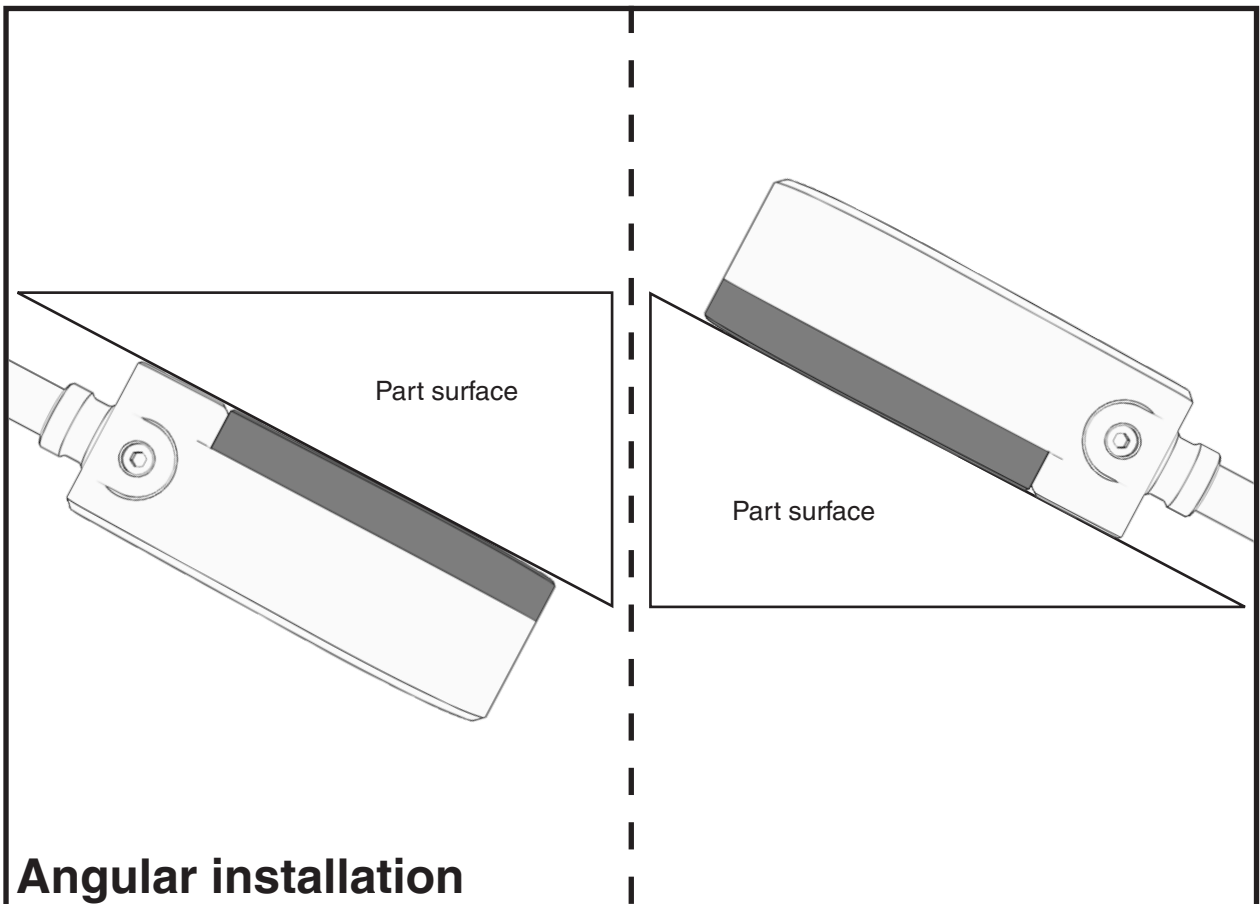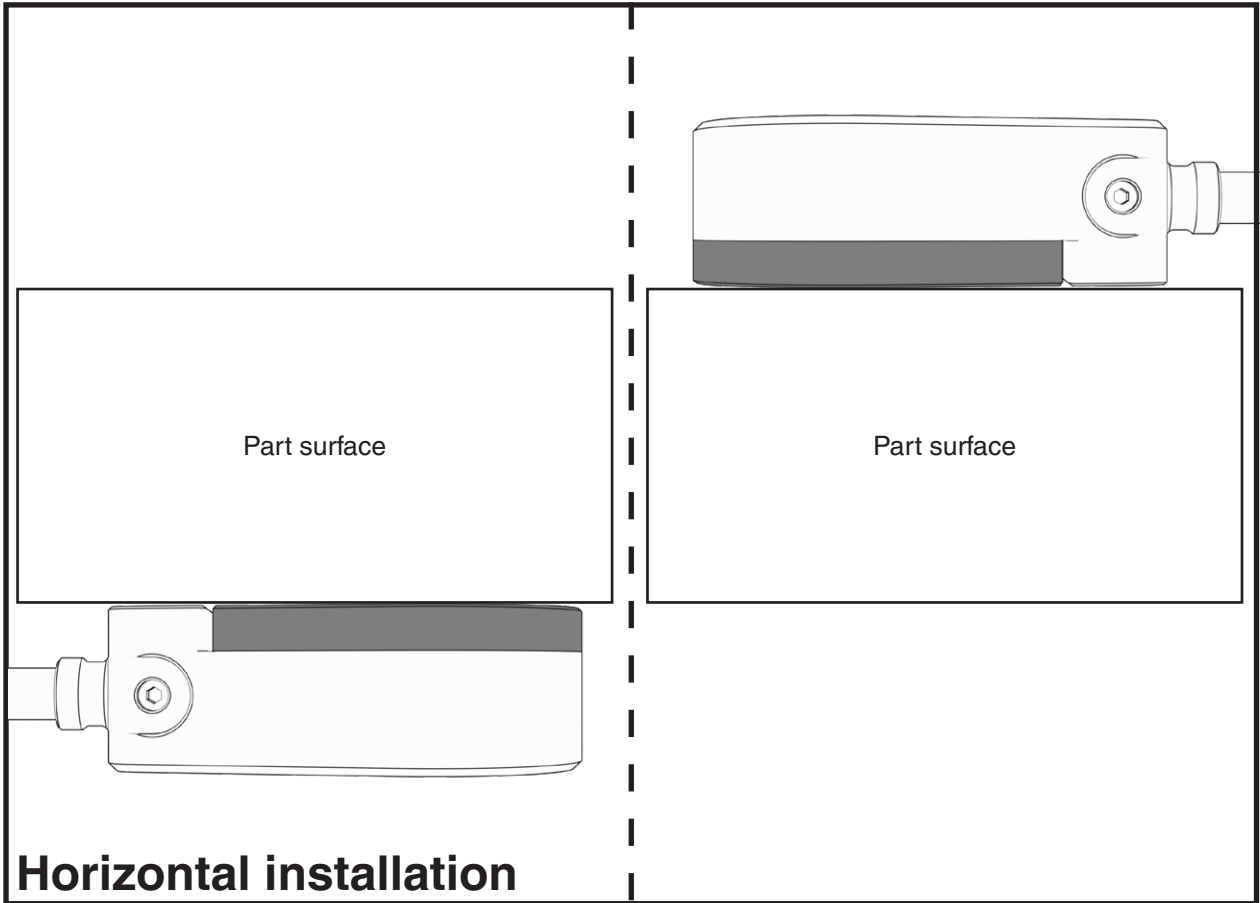

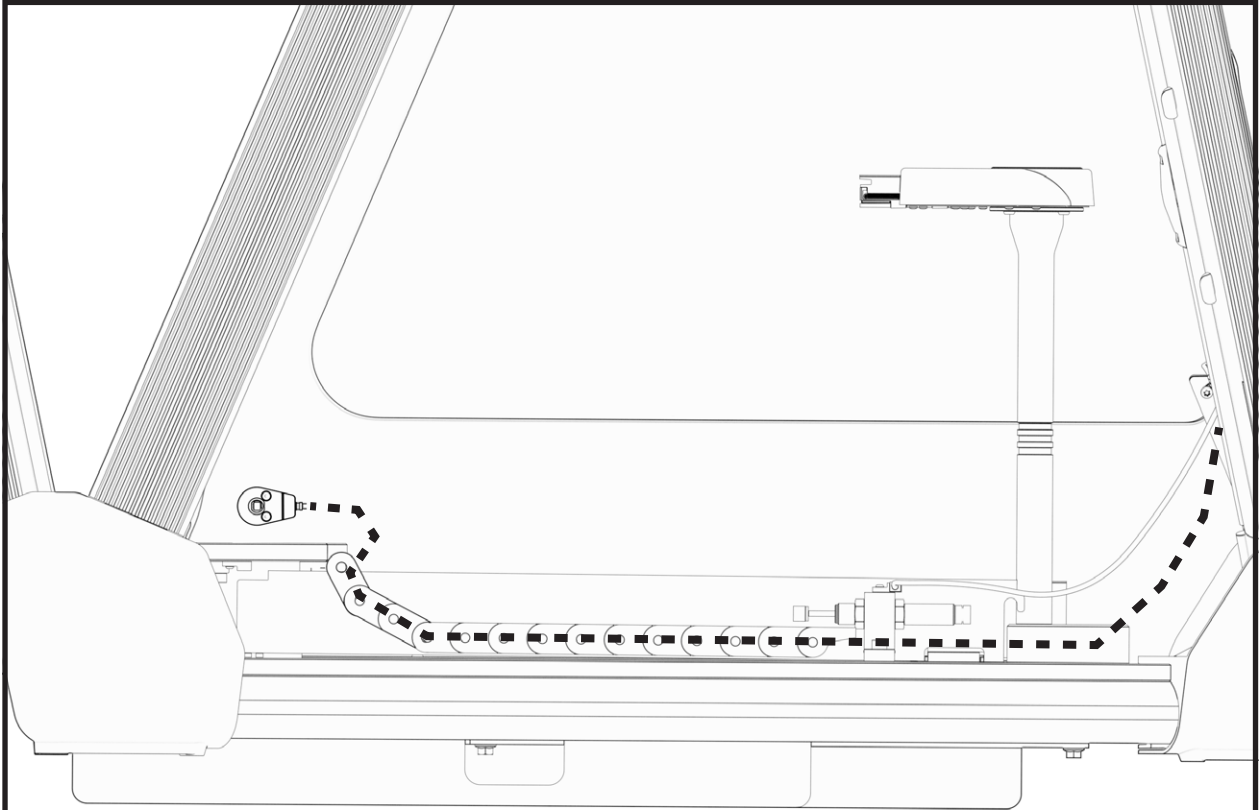

1 - Cable installation

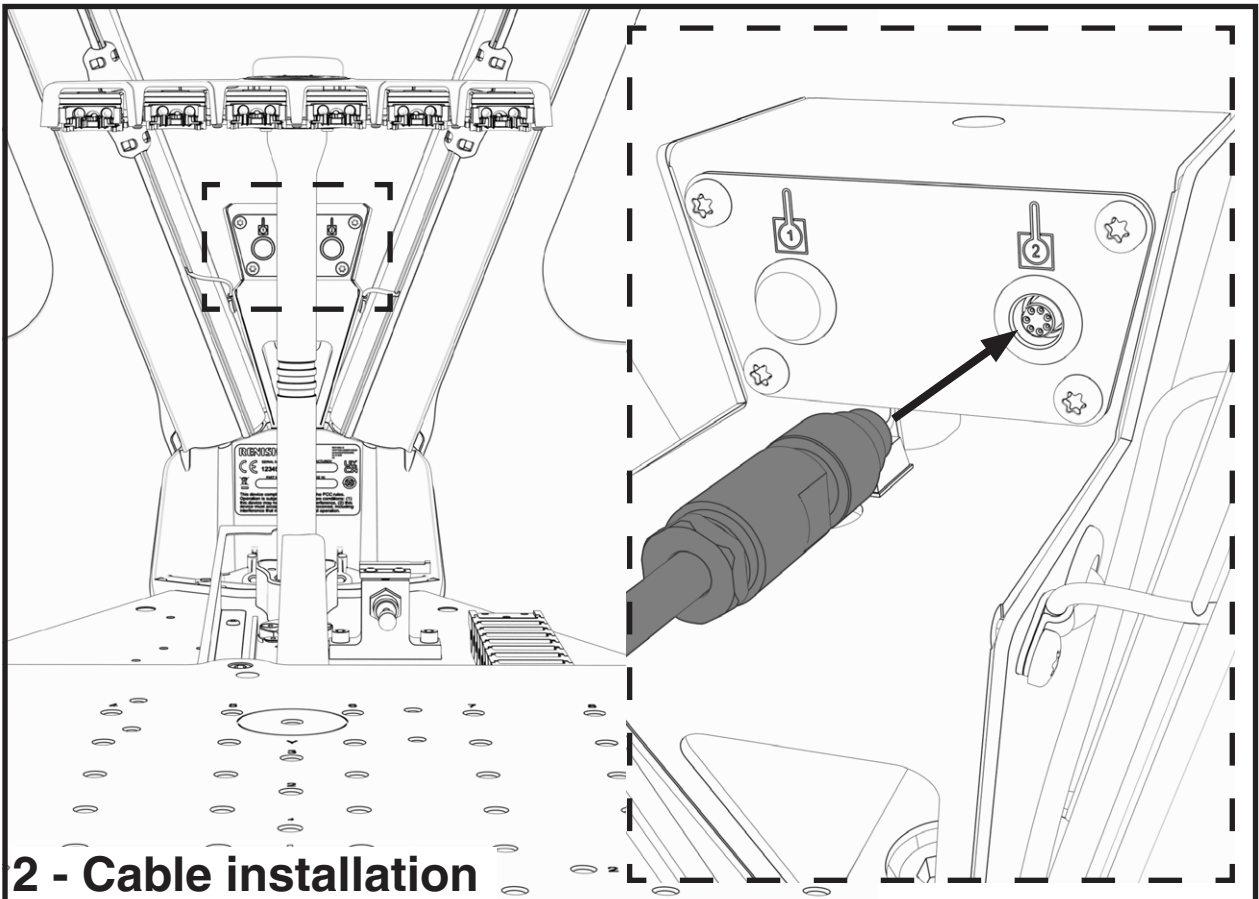

2 - Cable installation

www.renishaw.com/gauging



#renishaw

 +44 (0) 1453 524524

 uk@renishaw.com

© 2025 Renishaw plc. All rights reserved. This document may not be copied or reproduced in whole or in part, or transferred to any other media or language by any means, without the prior written permission of Renishaw.

RENISHAW® and the probe symbol are registered trade marks of Renishaw plc. Renishaw product names, designations and the mark 'apply innovation' are trade marks of Renishaw plc or its subsidiaries. Other brand, product or company names are trade marks of their respective owners.

WHILE CONSIDERABLE EFFORT WAS MADE TO VERIFY THE ACCURACY OF THIS DOCUMENT AT PUBLICATION, ALL WARRANTIES, CONDITIONS, REPRESENTATIONS AND LIABILITY, HOWSOEVER ARISING, ARE EXCLUDED TO THE EXTENT PERMITTED BY LAW. RENISHAW RESERVES THE RIGHT TO MAKE CHANGES TO THIS DOCUMENT AND TO THE EQUIPMENT, AND/OR SOFTWARE AND THE SPECIFICATION DESCRIBED HEREIN WITHOUT OBLIGATION TO PROVIDE NOTICE OF SUCH CHANGES.

Renishaw plc. Registered in England and Wales. Company no: 1106260. Registered office: New Mills, Wotton-under-Edge, Glos, GL12 8JR, UK.

Part no.: H-6620-8528-01-A

Issued: 12.2025