# Renishaw License Manager v2.\* How to Activate a Dongle Licence Issue: 1.0

#### © 2018 Renishaw plc. All rights reserved.

This document may not be copied or reproduced in whole or in part, or transferred to any other media or language, by any means, without the prior written permission of Renishaw.

The publication of material within this document does not imply freedom from the patent rights of Renishaw plc.

#### Disclaimer

Renishaw has made considerable efforts to ensure the content of this document is correct at the date of publication but makes no warranties or representations regarding the content. Renishaw excludes liability, howsoever arising, for any inaccuracies in this document.

### Trade marks

RENISHAW and the probe symbol used in the RENISHAW logo are registered trademarks of Renishaw plc in the United Kingdom and other countries. apply innovation and names and designations of other Renishaw products and technologies are trademarks of Renishaw plc or its subsidiaries.

All other brand names and product names used in this document are trade names, trademarks, or registered trademarks of their respective owners.

## **Activating a Dongle Licence**

To activate a licence:

- 1. Launch the Renishaw Licence Manager.
- 2. Click on the *Dongle Licences* button on the *Home* screen:



3. <u>Click on the *Load new entitlement* button:</u>

Dongle Licences					
Entitlements	Import Licences				
Entitlemer	ıt ID	Ħ			
		Load new entitlement			

Populate the form and with your contact information:

Enter Entitlement ID					
Please complete the following software registration form and then press OK to activate your entitlement.					
Read our Data P	rotection Statement				
Title	Mr				
First Name	John				
Second Name	Smith				
Email	Licensing@Renishaw.com				
Confirm Email	Licensing@Renishaw.com				
Language	English (English) 🔻				
Entitlement ID	6769-b04f-4ak3-t3st-n0mb-4ak3-r3n1-3h4w				
	OK Cancel				

The Entitlement ID can be found on the email received from <a href="mailto:licensing@Renishaw.com">licensing@Renishaw.com</a>, relating to your software order:

Dear Customer Thank you for your order of	Renishaw	software.								
Thank you for your order of	Renishaw	software.								
			hank you for your order of Renishaw software.							
Your order has been dispate	hed whic	h included	the following Renishaw software							
rour order nus seen dispute	neu mile	in included	are following realistical sociality.							
Entitlement ID 772f-2c0e-t	st-4ak3-i	3n1-3h4w	-n0mb-4ak3							
Product	Version	Quantity	Activation ID	Duration						
MODUS 2 - Touch Trigger	1.0	2	6769-b04f-4ak3-t3st-n0mb-4ak3-r3n1-3h4w	Starts Dec 22, 201						

4. The application will display all available licences for the given *Entitlement Id*:

💽 Renishaw Licence Manager	-		×
<b>↑</b>	₽	?	i
Dongle Licences  Entitlements Import Licences  Tentitlement ID 772f-2c0e+3st-4ak3-r3n1-3h4w-n0mb-4ak3  MODUS 2 - Touch Trigger Issue Date To Expliny Date Permanent Dongle space used 0%  No products available			
Conline Export Apply			
RENISHAW			

- 5. Plug in the dongle onto which you want the new licence to be applied. (If any licences exist on the dongle, they will appear in the *Dongle Licences* panel.)
- 6. In the left-hand window select the licence you wish to apply.
- 7. Click the *Apply* button.
- 8. Once the licence has been successfully applied, it will be removed from *Entitlements* list and appears in right hand side window under *Dongle Licences* list.