RELM/RELE scale installation with SiGNUM" SR readhead (Adhesive mounting method shown)

Dimensions and tolerances in mm



