

MP7 - 8 - 9 - 10 Battery Covers

The revised battery covers shown below, provide improved sealing, clamping and EMC protection.

BATTERY CHANGE


Remove cover with battery symbol

To change a battery, unscrew the two clamping screws and remove the cover and battery

Dispose of the exhausted battery in accordance with local regulations.

Insert the new battery, (9V Duracell MN 1604), with the polarity as shown on the battery cover label. Then fit the battery cover and tighten screws.

Screw torque
1,1 Nm (0,8 lbf.ft)

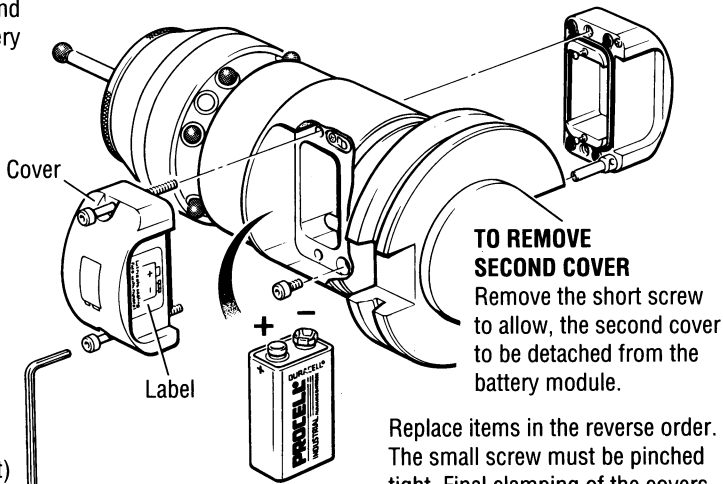

This cover is removed to enable shank attachment to probe and stylus on-centre adjustment using centre ball

TO REMOVE SECOND COVER

Remove the short screw to allow, the second cover to be detached from the battery module.

Replace items in the reverse order. The small screw must be pinched tight. Final clamping of the covers is completed when the two long screws are correctly tightened.