

## OMI-2C optical machine interface





**1**

**English**

**Installation and user's guide**

**OMI-2C optical machine interface**

This page is intentionally left blank

© 2005-2015 Renishaw plc. All rights reserved.

This document may not be copied or reproduced in whole or in part, or transferred to any other media or language, by any means, without the prior written permission of Renishaw.

The publication of material within this document does not imply freedom from the patent rights of Renishaw plc.

### Trade marks

**RENISHAW** and the probe symbol used in the RENISHAW logo are registered trade marks of Renishaw plc in the United Kingdom and other countries. **apply innovation** and names and designations of other Renishaw products and technologies are trade marks of Renishaw plc or its subsidiaries.

All other brand names and product names used in this document are trade names, trade marks, or registered trade marks of their respective owners.

Renishaw part no: H-2000-5256-06-A

Issued: 03.15

### Disclaimer

RENISHAW HAS MADE CONSIDERABLE EFFORTS TO ENSURE THE CONTENT OF THIS DOCUMENT IS CORRECT AT THE DATE OF PUBLICATION BUT MAKES NO WARRANTIES OR REPRESENTATIONS REGARDING THE CONTENT. RENISHAW EXCLUDES LIABILITY, HOWSOEVER ARISING, FOR ANY INACCURACIES IN THIS DOCUMENT.

### Warranty

Equipment requiring attention under warranty must be returned to your equipment supplier.

Unless otherwise specifically agreed in writing between you and Renishaw, if you purchased the equipment from a Renishaw company the warranty provisions contained in Renishaw's CONDITIONS OF SALE apply. You should consult these conditions in order to find out the details of your warranty but in summary the main exclusions from the warranty are if the equipment has been:

- neglected, mishandled or inappropriately used; or
- modified or altered in any way except with the prior written agreement of Renishaw.

If you purchased the equipment from any other supplier, you should contact them to find out what repairs are covered by their warranty.



### EC declaration of conformity

Renishaw plc declares that the OMI-2C optical machine interface complies with the applicable standards and regulations.

Contact Renishaw plc at [www.renishaw.com/omi-2c](http://www.renishaw.com/omi-2c) for the full EC declaration of conformity.

### WEEE directive



The use of this symbol on Renishaw products and/or accompanying documentation indicates that the product should not be mixed with general household waste upon disposal. It is the responsibility of the end user to dispose of this product at a designated collection point for waste electrical and electronic equipment (WEEE) to enable reuse or recycling. Correct disposal of this product will help to save valuable resources and prevent potential negative effects on the environment. For more information, please contact your local waste disposal service or Renishaw distributor.

### FCC

#### Information to user (FCC Section 15.19)

This device complies with Part 15 of the FCC rules. Operation is subject to the following conditions:

1. This device may not cause harmful interference.
2. This device must accept any interference received, including interference that may cause undesired operation.

#### Information to user (FCC Section 15.21)

The user is cautioned that any changes or modifications not expressly approved by Renishaw plc or authorised representative could void the user's authority to operate the equipment.

#### Information to user (FCC Section 15.105)

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with this installation guide, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference, in which case you will be required to correct the interference at your own expense.

## Patent notice

Features of OMI-2C optical machine interface, and other related products, are the subject of one or more of the following patents and/or patent applications:

EP 0974208            US 6839563

EP 1503524            JP 429401

## Information for the user

There are no user serviceable parts inside the OMI-2C. Return defective units to an authorised Renishaw Customer Service Centre. Please quote the serial number.

Remove power before performing any maintenance operations.

CNC machine tools must only be operated by competent persons in accordance with the machine supplier's operating instructions.

## Information for the machine's supplier

It is the responsibility of the machine's supplier to ensure that the user is made aware of any hazards involved in operation, including those mentioned in Renishaw product documentation, and to ensure that adequate guards and safety interlocks are provided.

## Environment

### IP rating

The front face of the OMI-2C is sealed to IPX8 (when the unit is correctly installed).

### Temperature

**Storage:** The OMI-2C should be stored in an area where the ambient temperature will remain between  $-10\text{ }^{\circ}\text{C}$  and  $70\text{ }^{\circ}\text{C}$  ( $14\text{ }^{\circ}\text{F}$  to  $158\text{ }^{\circ}\text{F}$ ).

**Operation:** The OMI-2C may be operated in ambient temperatures of between  $0\text{ }^{\circ}\text{C}$  and  $60\text{ }^{\circ}\text{C}$  ( $32\text{ }^{\circ}\text{F}$  and  $140\text{ }^{\circ}\text{F}$ ).

## Specification

### Weight of unit with retaining bracket:

70 g (2.5 oz)

## Care of the equipment

The OMI-2C should be kept clean from dirt, coolant and machining debris at all times, otherwise the transmission range may be reduced. Wipe the window clean as often as is necessary to maintain unrestricted transmission.

When handling, treat the OMI-2C with care. It is a precision component that can be easily damaged.

Do not apply labels to, or otherwise obstruct, the window of the OMI-2C.

## Contents

System overview . . . . .	1-2	OMI-2C electrical outputs and inputs . . . . .	1-10
Typical system . . . . .	1-3	OMI-2C visual diagnostics . . . . .	1-11
System performance . . . . .	1-4	OMI-2C output waveforms . . . . .	1-12
Performance envelope of OMP60 and OMI-2C. . . . .	1-5	Fault finding . . . . .	1-13
Mounting the OMI-2C . . . . .	1-6	Parts list . . . . .	1-17
OMI-2C dimensions and cable connection. . . . .	1-7		
OMI-2C cable recommendation and electrical connection . . . . .	1-8		
OMI-2C wiring diagram. . . . .	1-9		

## System overview


The OMI-2C provides an interface between the machine controller and Renishaw's range of modulated transmission probes, such as the OMP60.

The OMI-2C converts optical signals into electrical signals suitable for use by the machine controller.

The OMI-2C converts electrical signals from the controller into modulated optical probe signals. This facility allows the machine controller to be used to optically switch the probe on and off.

When in operation, the OMI-2C will report the following probe conditions via a multi-colour LED:

- Probe status
- Error
- Low battery

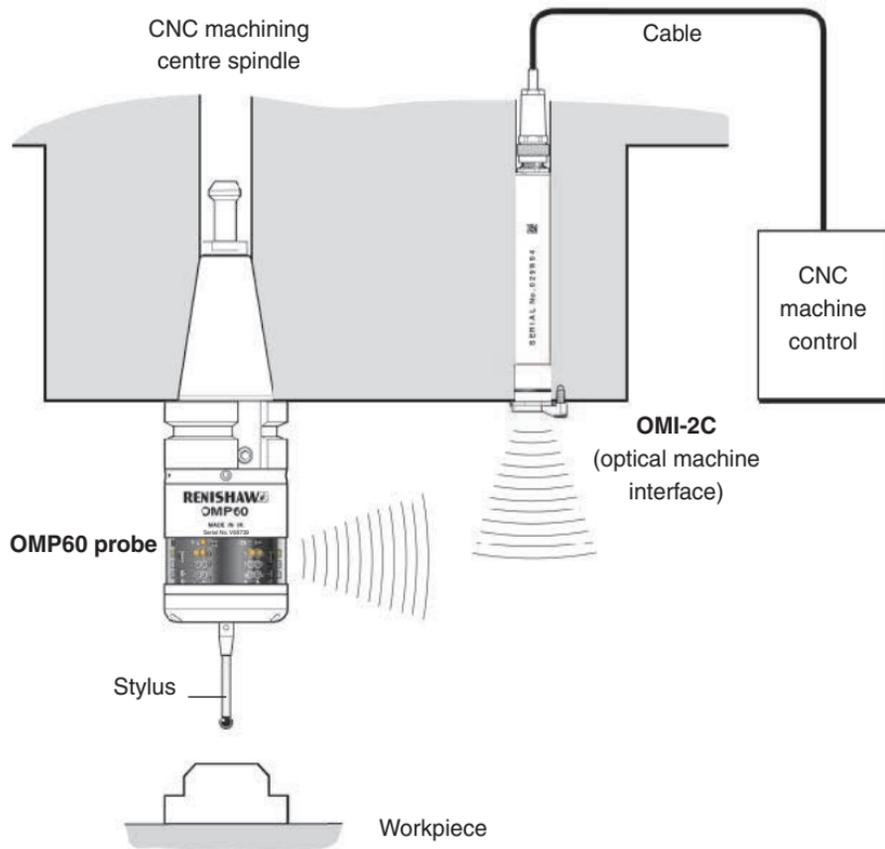

## System performance

### Operating envelope

Reflective surfaces within the machine cabinet may increase the signal transmission range.

Coolant residue accumulating on the windows of the OMI-2C and OMP will have a detrimental effect on transmission performance. Wipe the windows clean as often as is necessary to maintain unrestricted transmission.

For best system performance, ensure that the OMI-2C is mounted in a position which is not directly in front of a light source.



**CAUTION:** If two systems are operating in close proximity, take care to ensure that signals transmitted from the OMP on one machine are not received by the OMI-2C on the other machine and vice versa.

---


## Performance envelope of OMP60 probe and OMI-2C

### OMP60 probe and OMI-2C

The probe and OMI-2C diodes must be in each other's field of view, and within the performance envelope shown. The OMP60 is fully described in the OMP60 installation guide H-4038-8505.

-  Switch on/off
-  Operating – standard power mode
-  Operating – low power mode

360° transmission around probe axis in metres (feet)

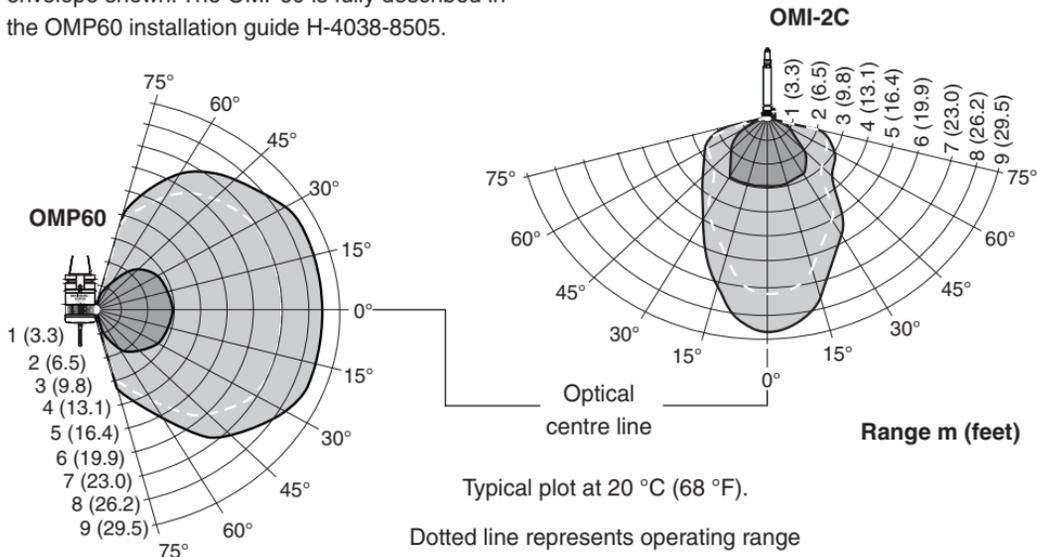

## Mounting the OMI-2C

---

 **WARNING:** Ensure the machine tool is in a safe condition and power is removed before removing covers. Only qualified persons should adjust switches.

---

---

 **CAUTION:** Different versions of the OMI-2C operate with specific machine controllers. Prior to installation, ensure that the OMI-2C is compatible with the machine controller.

---

The OMI-2C should be mounted as near to the machine spindle as possible (as shown in the system diagram on page 1-3).

To achieve the best possible transmission range and performance envelope, it is recommended that the mounting screw is positioned on the far side of the OMI-2C, relative to the expected probe position.


When mounting the OMI-2C, it is important that the sealing ring forms a tight seal around the rim of the bore into which the body of the OMI-2C is to be located.

---

 **CAUTION:** Make sure that the sealing ring is lubricated prior to being mounted in the machine spindle.

---

### OMI-2C dimensions and cable connection

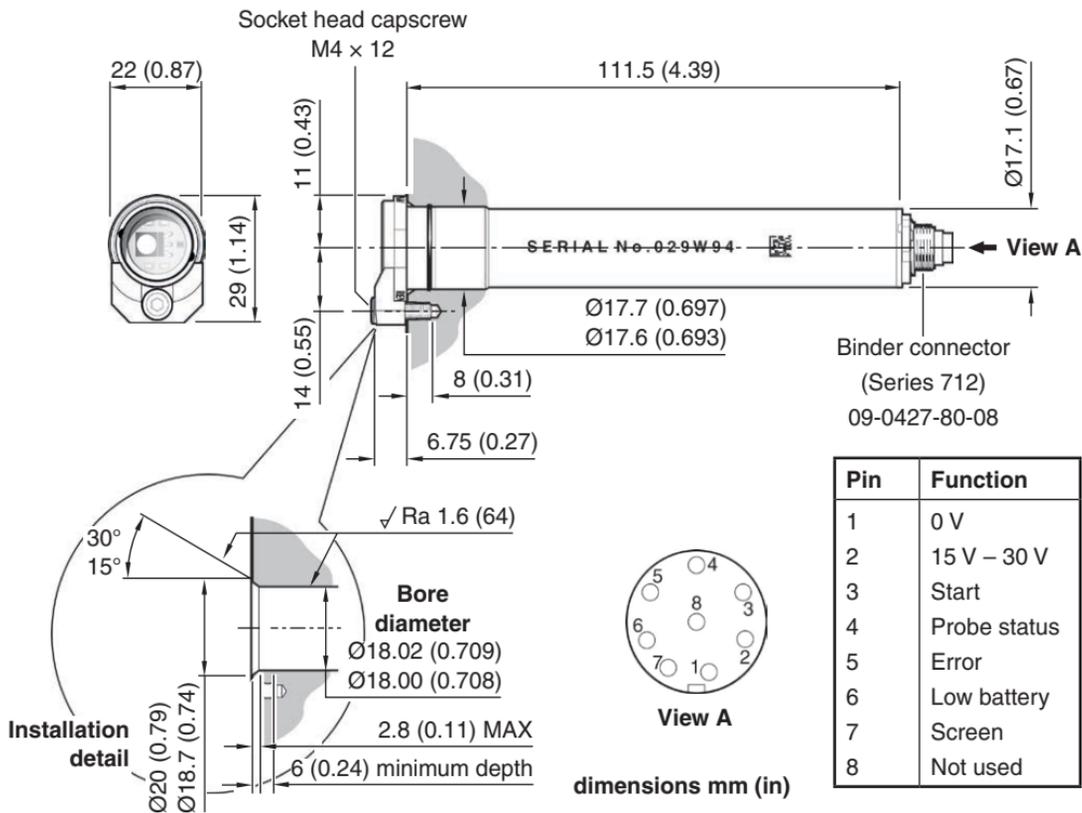

## Cable recommendation

Cables must be routed carefully to avoid potential sources of electromagnetic interference.

## Cable specification

Ø4.5 mm (0.18 in) to Ø5.0 mm (0.20 in), 12 core screened cable each core 7/0.1 mm.

## Standard cable variants

The OMI-2C standard polyurethane cables are 8 m (25 ft) and 15 m (49 ft) long.

---

**NOTE:** Maximum length of the specified cable must not exceed 30 m (98 ft).

---


## OMI-2C electrical connection

### OMI-2C power supply

The OMI-2C requires a suitably fused (500 mA) 24 volt clean power supply, which is capable of providing up to 200 mA of current. The supply can be taken from the machine, or via an external power supply. It is important that any input voltage ripple will not cause the voltage to fall below 15 volts or rise above 30 volts.

Connection of the OMI-2C to the power supply is achieved via the 8 pin connector located on the rear of the OMI-2C. If a Renishaw cable is supplied then the colours shown in the diagram opposite can be used.

## OMI-2C wiring diagram

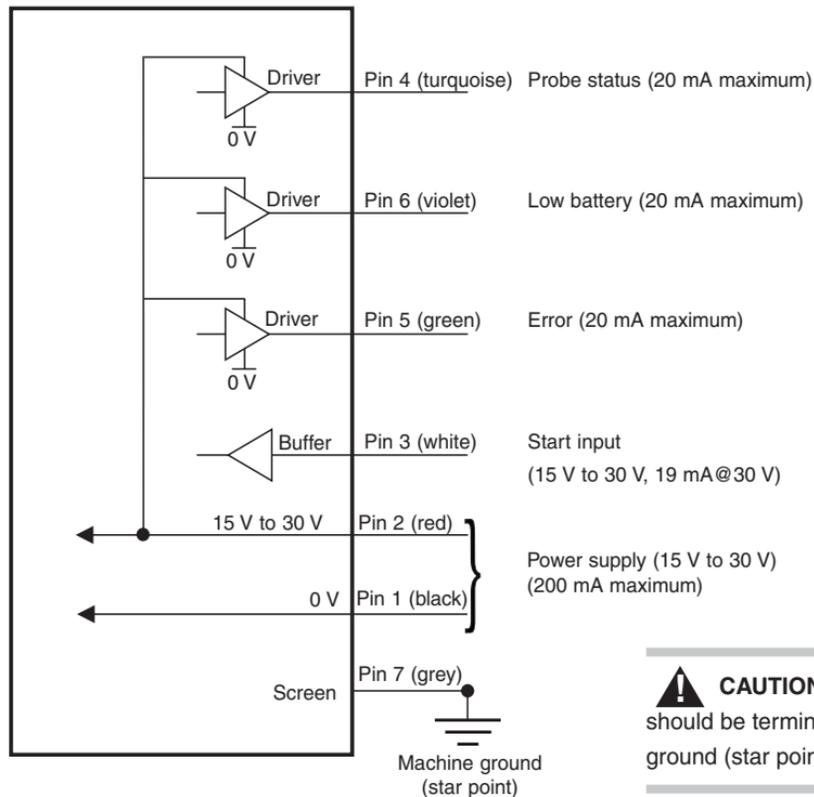

**CAUTION:** The power supply 0 V should be terminated at the machine ground (star point).

## OMI-2C outputs

The OMI-2C has three electrical outputs which are driven relative to the ground connection:

Probe status (pin 4)

Error (pin 5)

Low battery (pin 6)

The maximum rated sink or source current per output is 20 mA. If this current is exceeded, the OMI-2C isolates all outputs and the visual diagnostics LED will flash red.

When an 8 m Renishaw cable assembly is used and outputs are driven high, they may be up to 2 V below the supply voltage. Alternatively, when the outputs are driven low, they may be up to 2 V above 0 V.

When a 15 m Renishaw cable assembly is used and outputs are driven high, they may be up to 2.5 V below the supply voltage. Alternatively, when the outputs are driven low, they may be up to 2.5 V above 0 V.

---

**NOTE:** Refer to parts list for Renishaw OMI-2C cable assemblies.

---

The OMI-2C will respond to a received probe trigger signal with a delay of  $500 \mu\text{s} \pm 15 \mu\text{s}$ . The time delay from the physical probe trigger to any output change will depend on the configuration of the probe.

## OMI-2C input

The OMI-2C has a single electrical input that allows the machine controller to switch the probe on and off. The start input (pin 3) must be connected to the machine's start and stop M-code.


When the input is active (15 V to 30 V, 19 mA @ 30 V), the probe is switched on.

## OMI-2C visual diagnostics

When in operation, the OMI-2C displays its present status via a multicoloured LED located behind the front window. The LED display configuration is as shown below.

LED	Probe status	Graphic hint
Flashing green (for 3 seconds on power up)	Controller type: Heidenhain i530/ Siemens 840D	
Constant red	Probe on and triggered	
Constant green	Probe on and seated	
Constant blue	Probe error or probe off	
Flashing blue and red	Low battery when probe is triggered	
Flashing blue and green	Low battery when probe is seated	
Yellow flash (0.5 second duration)	Start/stop signal	
Flashing red	Overcurrent condition (reset OMI-2C by removing power)	

## OMI-2C output waveforms

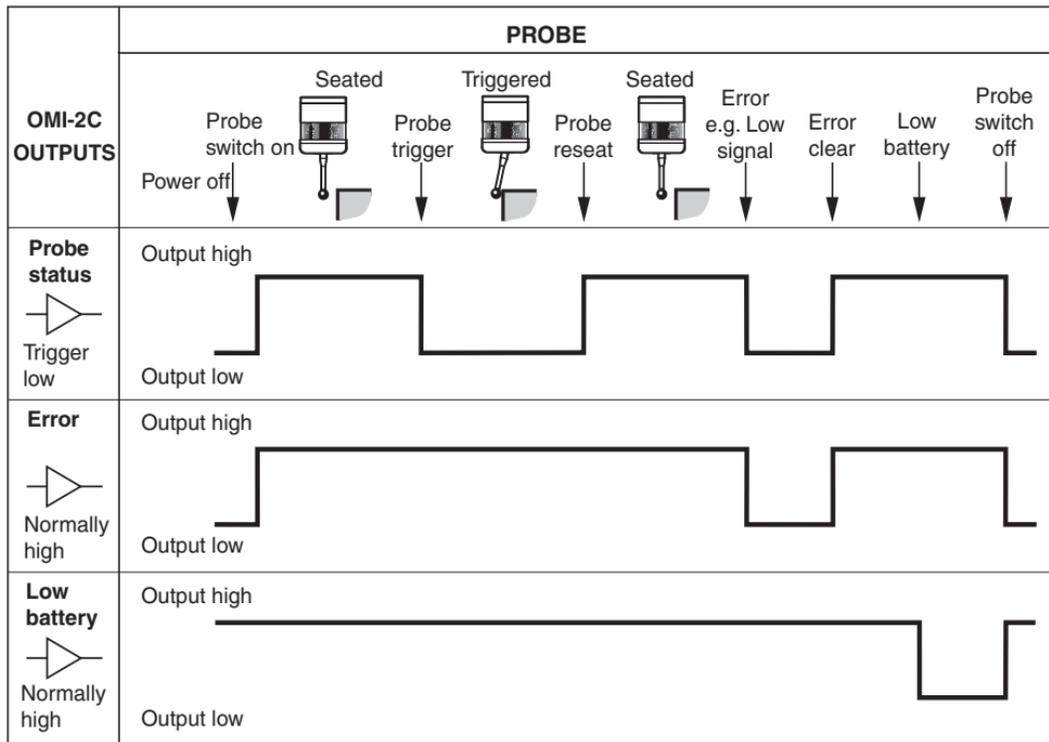

The output signals from the OMI-2C must be compatible with the machine control input.

### Fault finding

If in doubt, consult your probe supplier.

Symptom	Cause	Action
<b>No LED display when power is on.</b>	No power supply.	Ensure that the power source has not been isolated from the main electrical supply.
	Cable used to connect the OMI-2C to the power supply has been damaged, is of incorrect specification or has been incorrectly wired.	Visually inspect the cable for obvious signs of damage.  Test the cable to ensure the electrical continuity of each wire.  Verify that the cable has been correctly wired for use with the OMI-2C.
	Rear pin connector on OMI-2C is loose or disengaged.	Ensure rear pin connector is properly engaged and secure.
	Pins on electrical connector damaged or missing.	Visually inspect the connector to ensure that no pins are damaged or missing.
	OMI-2C unit is itself defective.	Contact your supplier for assistance.

Symptom	Cause	Action
<b>OMI-2C LED continuously flashes red.</b>	Output signal has required too high a current.	<p>Confirm that the outputs from the OMI-2C are correctly wired into the inputs of the machine controller.</p> <p>Reset the OMI-2C by first removing and then reapplying the power supply to the unit.</p> <p>Disconnect all output wires and ensure that none have been connected to a power signal supply.</p>
<b>Probe fails to switch on when in 'optical start' mode or switch off when in 'optical stop' mode.</b>	Installation/CNC program fault.	Correct M-code wiring and/or CNC program.
	Beam obstructed.	Clean the OMI-2C window and remove any obstructions.
	Incompatible probe/probe transmission setting.	Change probe or probe setting to 'modulated'.
	Dead probe batteries.	Replace probe batteries.
	Optical interference is blocking the start signal.	Remove source of interference.

Symptom	Cause	Action
<p><b>Probe stops in mid-cycle.</b></p> <p>or</p> <p><b>An unexpected error occurs during a probing cycle.</b></p> <p>or</p> <p><b>An unexpected trigger occurs during the probing cycle.</b></p>	Beam obstructed.	Remove obstruction.
	Optical interference.	Remove source of interference.
	Intermittent wiring fault.	Correct wiring.
	Probe is in 'timer off' mode and has not been triggered for the timer period.	Increase 'timer off' time setting or change probing routine.
	Probe has not been triggered for more than 90 minutes.	Re-start probe and ensure that the probe is not idle for 90 minutes.
<p><b>Probe switches on, but OMI-2C error remains active.</b></p>	Interfering light source shining directly into OMI-2C window.	Remove source of interference.
	A signal is being received from a probe on an adjacent machine.	Change the adjacent probe to low power mode.
	Installation/CNC program fault.	Check error output and CNC program.

Symptom	Cause	Action
<b>Probe indicates 'low battery' condition, but the machine control does not.</b>	Installation/CNC programming fault.	Check 'low battery' output wiring and/or CNC program.
<b>Machine control does not respond to the probe being triggered or seated.</b>	Probe is not switched on.	Attempt to switch it on.
	Installation/CNC program fault.	Correct 'probe status' output wiring and CNC program.
	A signal is being received from a probe on an adjacent machine tool.	Change the adjacent probe to 'low power mode'.
<b>Probe fails to switch on.</b>	Probe was already on when the start signal was transmitted.	Check that the probe was turned off at the end of the last probing cycle.

## Parts list

Please quote the part number when ordering equipment.

Type	Part number	Description
OMI-2C kit	A-5314-0001	OMI-2C kit that is compatible with Heidenhain i530 or Siemens 840D controllers. Kit includes: OMI-2C, mounting kit, toolkit and user's guide.
Cable (8 m)	A-5314-0015	OMI-2C cable assembly, including 8 metres of cable.
Cable (15 m)	A-5314-0016	OMI-2C cable assembly, including 15 metres of cable.

This page is intentionally left blank.



**Renishaw plc**  
New Mills, Wotton-under-Edge,  
Gloucestershire, GL12 8JR  
United Kingdom

**T** +44 (0)1453 524524  
**F** +44 (0)1453 524901  
**E** [uk@renishaw.com](mailto:uk@renishaw.com)  
[www.renishaw.com](http://www.renishaw.com)

**RENISHAW**   
apply innovation™

**For worldwide contact details, visit**  
[www.renishaw.com/contact](http://www.renishaw.com/contact)



H - 2000 - 5256 - 06