


Thermal effect compensation for UCC1 and UCC2

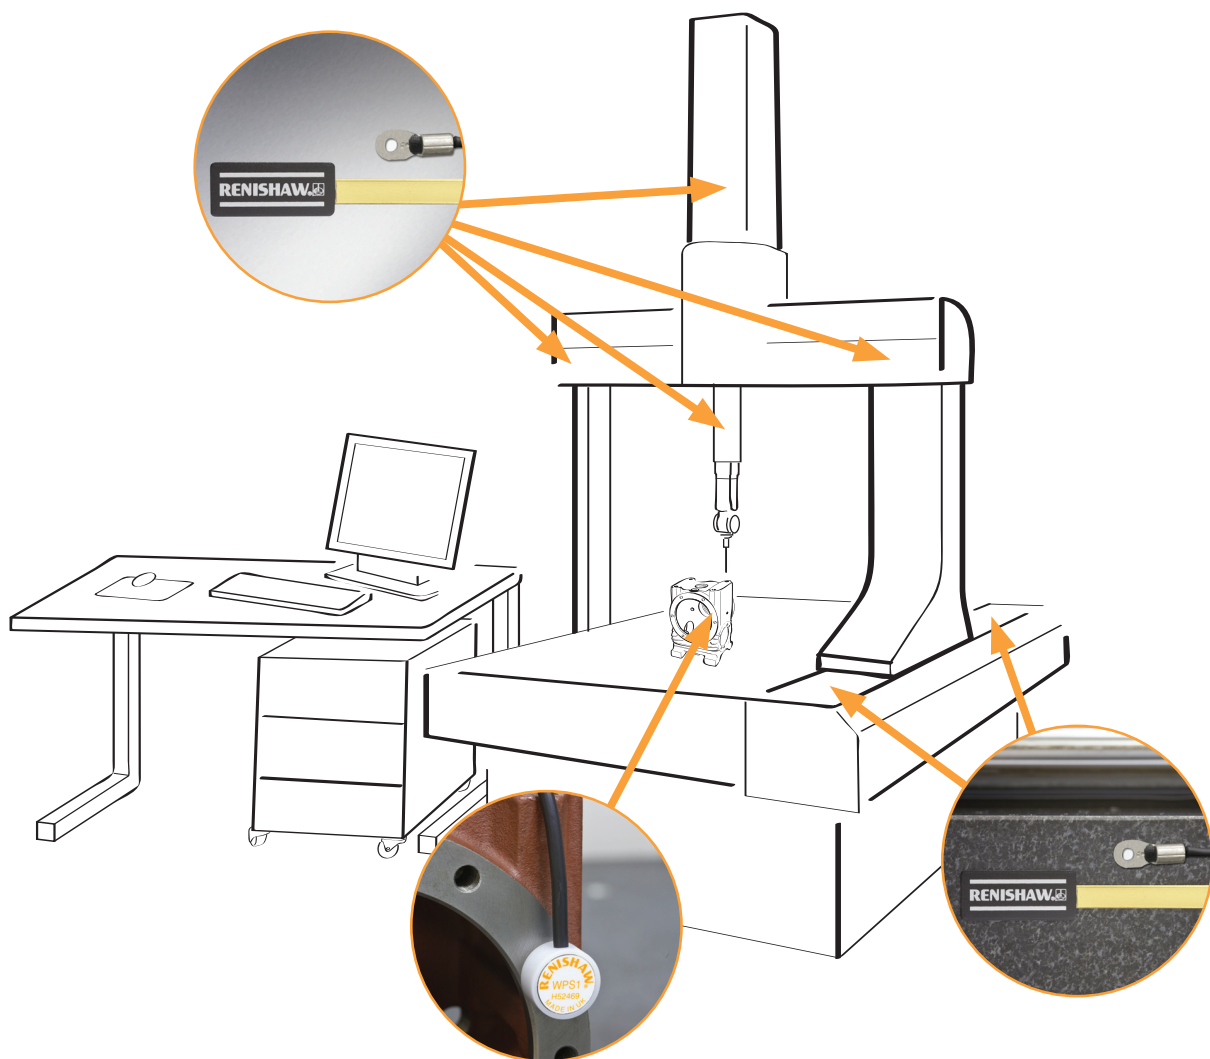

EXTENDED WARRANTY

Now available for this product.

Contact your vendor.

www.renishaw.com/ew

© 2006 - 2009 Renishaw plc. All rights reserved.

This document may not be copied or reproduced in whole or in part, or transferred to any other media or language, by any means, without the prior written permission of Renishaw.

The publication of material within this document does not imply freedom from the patent rights of Renishaw plc.

Disclaimer

RENISHAW HAS MADE CONSIDERABLE EFFORTS TO ENSURE THE CONTENT OF THIS DOCUMENT IS CORRECT AT THE DATE OF PUBLICATION BUT MAKES NO WARRANTIES OR REPRESENTATIONS REGARDING THE CONTENT. RENISHAW EXCLUDES LIABILITY, HOWSOEVER ARISING, FOR ANY INACCURACIES IN THIS DOCUMENT.

Trademarks

RENISHAW® and the probe emblem used in the RENISHAW logo are registered trademarks of Renishaw plc in the UK and other countries.

apply innovation is a trademark of Renishaw plc.

All other brand names and product names used in this document are trade names, service marks, trademarks, or registered trademarks of their respective owners.

UCC1/UCC2

Thermal effect compensation (TEC) system

Installation and user's guide



FCC (USA only)

Information to user (FCC section 15.105)

This equipment has been tested and found to comply with the limits for a class A digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the installation manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference, in which case you will be required to correct the interference at your expense.

Information to user (FCC section 15.21)

The user is cautioned that any changes or modifications not expressly approved by Renishaw plc or authorised representative could void the user's authority to operate the equipment.

Special accessories (FCC section 15.27)

The user is also cautioned that any peripheral device installed with this equipment such as a computer, must be connected with a high quality shielded cable to insure compliance with FCC limits.

EC DECLARATION OF CONFORMITY

Renishaw plc declare that the product: -

Name: UCC TEC daughtercard

Description: Thermal effect compensation card

Part no: A-1333-0190

has been manufactured in conformity with the following standard: -

BS EN 61326:1998/ Electrical equipment for measurement, control and
A1:1998/A2:2001 laboratory use - EMC requirements.
Immunity to annex A - industrial locations.
Emissions to class A (non-domestic) limits.

and that it complies with the requirements of the following directive (as amended): -

89/336/EEC Electromagnetic compatibility (EMC)

The above information is summarised from the full EC Declaration of Conformity. A copy is available from Renishaw on request.

Care of equipment

Renishaw probes and associated systems are precision tools used for obtaining precise measurements and must therefore be treated with care.

Changes to Renishaw products

Renishaw reserves the right to improve, change or modify its hardware or software without incurring any obligations to make changes to Renishaw equipment previously sold.

Warranty

Renishaw plc warrants its equipment for a limited period (as set out in our Standard Terms and Conditions of Sale) provided that it is installed exactly as defined in associated Renishaw documentation.

Prior consent must be obtained from Renishaw if non-Renishaw equipment (e.g. interfaces and/or cabling) is to be used or substituted. Failure to comply with this will invalidate the Renishaw warranty.

Claims under warranty must be made from authorised service centres only, which may be advised by the supplier or distributor.

References and associated documents

It is recommended that, in addition to this document, the following documentation is referenced when installing the TEC system.

Renishaw documents

Documentation available from www.renishaw.com.

Document number	Title
H-1000-5056	UCC1 installation guide
H-1000-5223	UCC2 installation guide
H-1000-5057	UCC programmer's guide
H-1000-5058	Renicis user's guide
H-1000-5222	UCC command set
H-1000-5224	UCCassist installation guide
H-1000-5220	Daughtercard installation guide

External documents

Document number	Title
CFR 47 Part 15 (1992)	FCC, Telecommunications, Radio Frequency Devices
BS EN 292-1	Safety of Machinery
BS EN 50081-2	Requirements as to Emission of Electromagnetic Disturbances in an Industrial Environment
BS EN 60204: Part 1 1993	General Essential Safety Requirements for Machines (Low Voltage Directive)
BS EN 61010-1 (1993)	General Requirements for Electrical Equipment

Safety

Electrical requirements

The UCC is powered from the a.c. mains supply via an IEC C14 connector.

Please refer to the UCC1 or **UCC2** installation guide (H-1000-5056 or H-1000-5223) for safety instructions and documentation relevant to the use of the UCC1 or **UCC2** CMM controllers and their subsystems.

Environmental requirements

The thermal effect compensation daughtercard, when installed in a UCC1/**UCC2** system, complies with (or exceeds) the following environmental conditions BS EN 61010-1:1993:


Indoor use	IP30 (no protection against water)
Altitude	Up to 2000 m
Operating temperature	0 °C to +50 °C
Storage temperature	-10 °C to +70 °C
Relative humidity	80% maximum (non-condensing) for temperatures up to +31 °C Linear decrease to 50% at +40 °C
Transient overvoltages	Installation category II
Pollution degree	2
Sensor working range	0 °C to 70 °C

Contents

1	Thermal effect compensation (TEC) system	9
1.1	System components.....	10
2	System hardware specification.....	11
2.1	Thermal effect compensation (TEC) daughtercard specification	11
2.1.1	General description.....	11
2.1.2	Thermistor connections to daughtercard	11
2.2	Electrical integration.....	12
2.2.1	44-way D-type plug connector	12
2.2.2	Cable connections	13
2.2.3	Mating connector	13
2.3	Axis sensor specification.....	14
2.3.1	General description.....	14
2.3.2	Dimensions	14
2.3.3	Mating connectors	14
2.4	Workpiece sensor specification.....	15
2.4.1	General description.....	15
2.4.2	Dimensions	15
2.4.3	Mating connectors	15
2.4.4	Part attached switch.....	16
2.5	Sensor resistance checks	16
2.5.1	Resistance check procedure.....	16
2.5.2	Part attached switch check	16
3	Software integration	17
3.1	Set up commands	17
3.2	Status monitoring commands.....	17
3.3	Averaging	18
3.4	Calibration offsets	18
3.5	Discrete temperature reading commands.....	18
3.6	Firmware version check	19
3.7	Definition of entries in the thermal effect compensation TEC file.....	19
3.7.1	Machine ini file configuration.....	19
3.7.2	MachineThermalCompTemplate.tec	19
3.7.3	SystemConfiguration section	20
3.7.4	ChannelAssignment.....	22
3.7.5	X/Y/Z/Dual Axis.....	23
3.7.6	Workpiece.....	24
3.7.7	ChannelOffsets	25
3.7.8	SerialInterface1	26

4	System accuracy and calibration.....	27
5	Operation.....	28
5.1	Using the thermal effect compensation (TEC) system.....	28
5.2	Best practise for using the thermal compensation system.....	29
5.2.1	General	29
5.2.2	Workpiece sensor	29
5.2.3	Axis sensors	29
6	Appendix	30
6.1	Explanation of range alarm	30
6.2	Explanation of gradient alarm	31
6.3	Explanation of temporal alarm	32

1 Thermal effect compensation (TEC) system

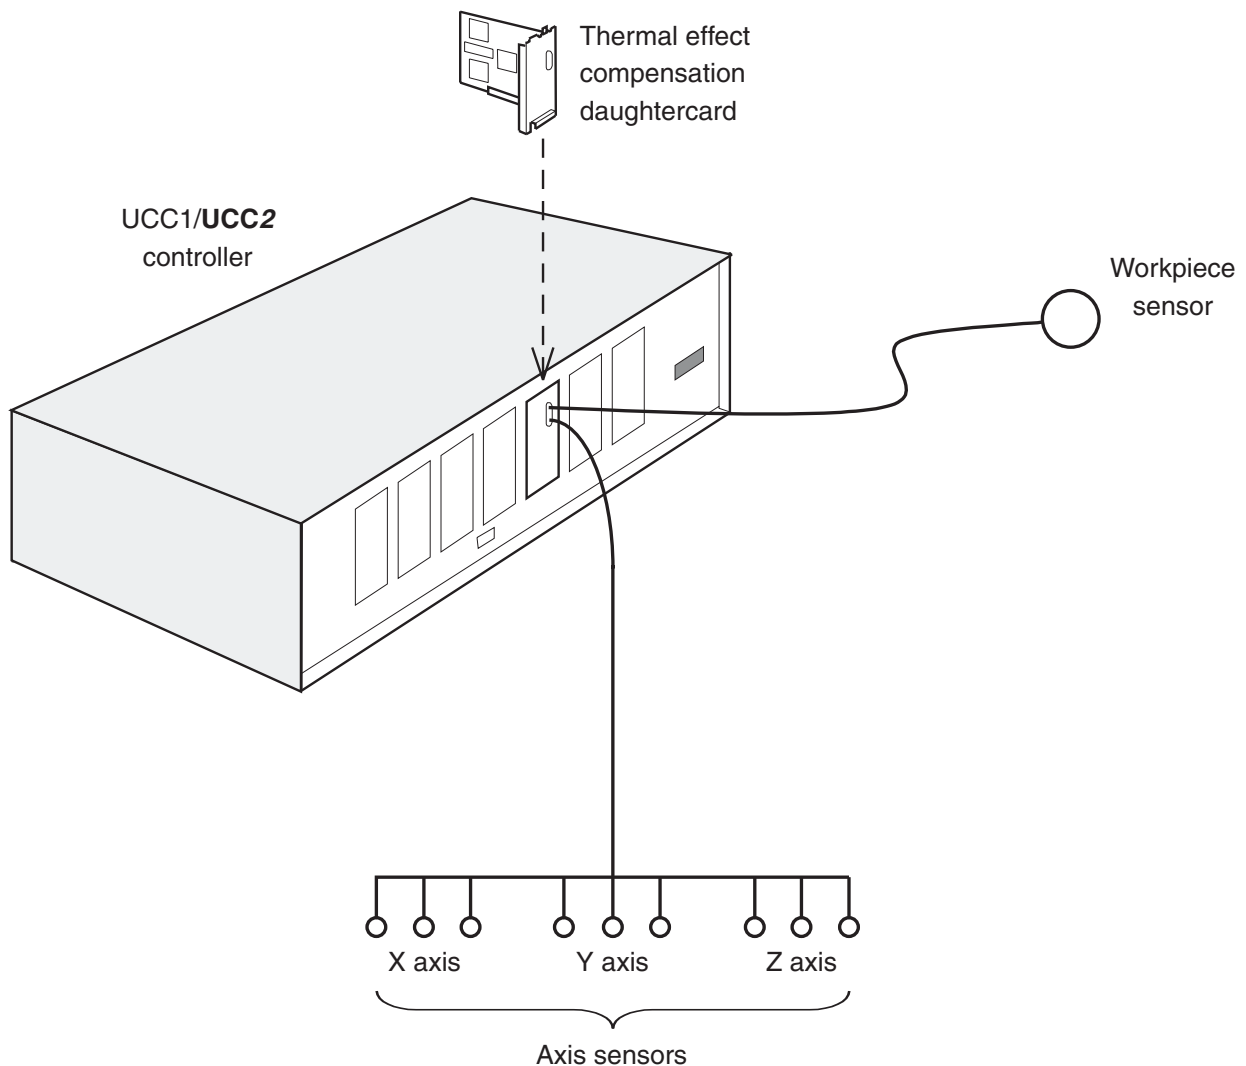

The thermal effect compensation daughtercard is one of the range of plug-in daughtercards for the Renishaw UCC1 and **UCC2** universal CMM controllers. This daughtercard will permit thermal effect compensation of the part being inspected and the CMM axes.

Up to 24 temperatures can be monitored and the information used to compensate for measurement errors introduced by thermal effects. These temperatures are measured using sensors which can be fixed to the X, Y and Z axes of the CMM, and to the workpiece being measured.

The daughtercard is designed for use with Betatherm NTC 10K3A1 thermistors (or equivalent) with an accuracy of ± 0.1 °C.



CAUTION: Other types of sensor should not be integrated into the system as the daughtercard hardware and software are not optimised for such devices (metrology may be adversely affected).

1.1 System components

The components of the UCC1 and **UCC2** thermal effect compensation systems are:

- Thermal effect compensation daughtercard (with mating connector supplied)
 - Part number: A-1333-0195
- Axis sensors (200 mm cable terminated with connector, mating part supplied)
 - Part number: A-5091-0725
- Workpiece sensors (2000 mm cable terminated with connector, mating part supplied)
 - with inline connector, part number: A-5091-0720
 - with panel mount connector, part number: A-5091-0730

2 System hardware specification

2.1 Thermal effect compensation (TEC) daughtercard specification

2.1.1 General description

The daughtercard assembly has a metal end plate for fixing to the rear panel of the UCC1/**UCC2** controller. Attached to the metal plate is a 44-way high-density D-type plug connector.

2.1.2 Thermistor connections to daughtercard


The 44-way high-density D-type plug connector on the daughtercard has the following connections:

Function	Connection
Switch input	1 pin (optional)
Sensor signals (24 channels)	24 pins
Sensors and switch common connection (0 V)	19 pins
Cable screen ground	Via connector shell

NOTE: Unused pins should be left open circuit inside the D-type connector.

2.2 Electrical integration

2.2.1 44-way D-type plug connector

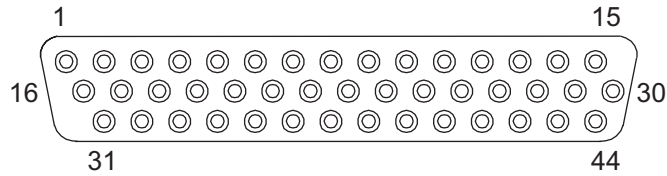

This connector is designed to permit the connection of the sensors to the UCC1/**UCC2**.

The connections for the 44-way D-type connector are shown in the table below.


Jacking posts are fitted to the connector on the rear panel to secure the mating socket (supplied).

Pin no.	Channel	Description
1	2	Sensor 2
2	3	Sensor 3
3	4	Sensor 4
4	5	Sensor 5
5	6	Sensor 6
6	7	Sensor 7
7	8	Sensor 8
8	9	Sensor 9
9	11	Sensor 11
10	13	Sensor 13
11	15	Sensor 15
12	17	Sensor 17
13	19	Sensor 19
14	21	Sensor 21
15	23	Sensor 23
16		Sensor common
17		Sensor common
18		Sensor common
19		Sensor common
20		Sensor common
21		Sensor common
22		Sensor common
23		Sensor common

Pin no.	Channel	Description
24		Sensor common
25		Sensor common
26		Sensor common
27		Sensor common
28		Sensor common
29		Sensor common
30		Sensor common
31		Sensor common
32		Switch input
33		Sensor common
34		Sensor common
35	1	Sensor 1
36		Sensor common
37	10	Sensor 10
38	12	Sensor 12
39	14	Sensor 14
40	16	Sensor 16
41	18	Sensor 18
42	20	Sensor 20
43	22	Sensor 22
44	24	Sensor 24
Shell		Screen

2.2.2 Cable connections

Each thermal effect compensation sensor will have two terminals that will be connected to the thermal effect compensation daughtercard in the UCC1/**UCC2**. At the UCC1/**UCC2**, all the cables from the different sensors should be brought together and wired into a 44-way high-density D-type socket connector (supplied).

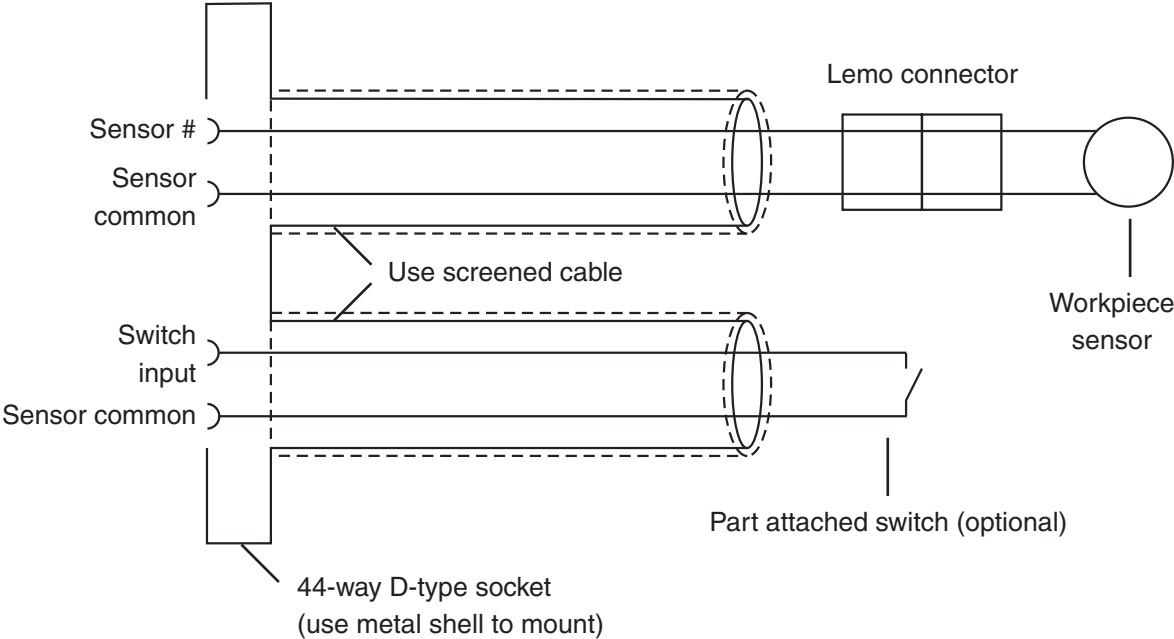

CAUTION:

- Minimum recommended conductor CSA of sensor cables, 0.14 mm².
- Maximum recommended return path resistance of sensor cables < 5 Ω.
- All cabling should be screened.
- Care must be taken to secure all axis sensor cabling to the axis body to prevent it getting trapped during moves.
- Workpiece sensor cabling must also be kept away from any moving sections of the CMM.

2.2.3 Mating connector

Manufacturers part number:

McMurdo HDB44ST


2.3 Axis sensor specification

2.3.1 General description

Axis sensors are required to monitor and compensate for any temperature changes within the CMMs scale. The axis sensor is housed in a potted ring terminal with a $\text{Ø}3.7$ mm hole which can be either screwed or glued in position using a thermally conductive glue. It is supplied with a 200 mm cable attached and a male JST connector fitted at the end, the mating part of the connector being supplied as part of the axis sensor kit.

NOTE: A maximum of 24 sensors can be used in any combination of workpiece and axis sensors.

2.3.2 Dimensions

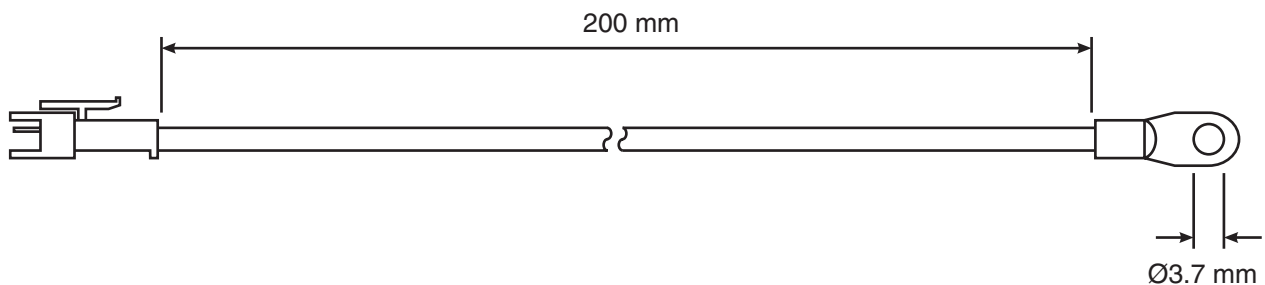

2.3.3 Mating connectors

Manufacturers part numbers (JST):

JST connector - SMP-02V-NC

JST pin - SHF-001T-0.8BS


2.4 Workpiece sensor specification

2.4.1 General description

Workpiece sensors are required to monitor and compensate for any temperature changes within the workpiece material. They can be magnetically mounted or clamped to the workpiece and is housed in a Ø20 mm aluminium body with a polyacetal sleeve. The sensor should be handled by this sleeve in order to reduce any thermal effects. It is supplied with a cable length of 2000 mm and has a LEMO connector fitted, the mating part of the connector is supplied as part of the workpiece sensor kit in either panel mount or in-line form.

NOTE: A maximum of 24 sensors can be used in any combination of workpiece and axis sensors.

2.4.2 Dimensions

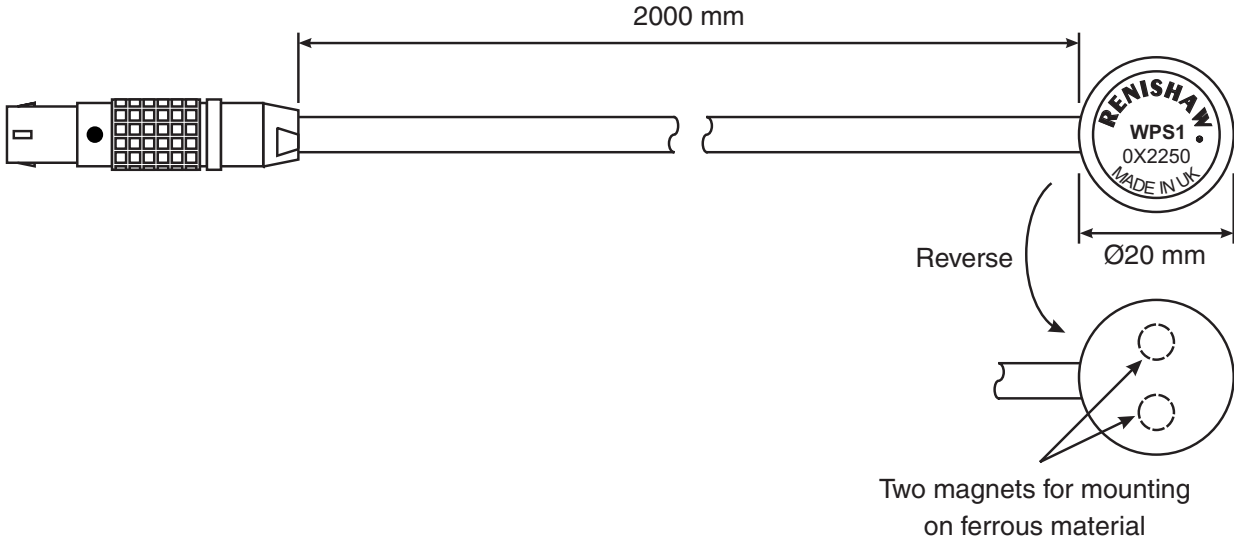

2.4.3 Mating connectors

Manufacturers part numbers (LEMO):


In line connector - PHG.1B.304.CYMD52

Panel mount - EGG.1B.304.CLL

Pin allocation:

Looking at the pins with the red dot on the LEMO pointing upwards:

- 'Pair A' - Top left pin and bottom left pin
- 'Pair B' - Top right and bottom right

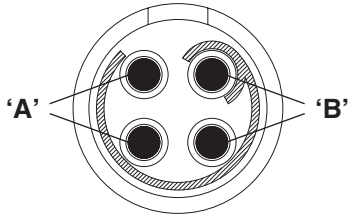

NOTE: Ensure the sensor is connected to the daughtercard with one pin from 'pair A' and one pin from 'pair B'.

2.4.4 Part attached switch

The part attached switch is optional and can be implemented using the connections shown in section 2.2. It allows the user to indicate to their application software when the workpiece sensor is clamped to the workpiece, and when temperature compensation for the workpiece can commence.

2.5 Sensor resistance checks

The following resistance check test is recommended:

- during system installation once all sensor cabling has been completed.
- after every hardware change to the system (e.g. sensor, cable or switch change).
- every six months, after the system has been commissioned, to check for any sensor/switch failure or cabling issues.

2.5.1 Resistance check procedure

- Regulate the temperature of the CMM room to a temperature between 16 °C and 28 °C.
- Allow the CMM to stabilise thermally for a minimum of one hour.
- Measure the sensor resistance from the 44-way D-type socket that the sensors are wired into. This is the resistance that the TEC card measures (cable plus sensor resistance).
- All workpiece and axis sensor resistance measurements should be within this range:

$$8.4 \text{ k}\Omega < R < 15.7 \text{ k}\Omega.$$

2.5.2 Part attached switch check

- Check the resistance between switch input (pin 32 of the 44-way D-type socket) and any common ground.
- The resistance value should be less than 20 Ω when the switch is in the ON position, and more than 1 M Ω in the OFF position.

3 Software integration

Software integration details are specified in the UCC command set document (Renishaw part number H-1000-5222). Please refer to the thermal effect compensation section of this document for full integration details. However, the following is an introduction to the commands required.

NOTE: Current software does not take thermal bending in to account .

3.1 Set up commands

Command 471, Temperature Compensation Machine Configuration

This command allows the user to define the temperature compensation (or thermal effect compensation) configuration for each of the machine axes. It will need to be called once for every machine axis (including the dual axis if appropriate). Some of the values required, such as calibration temperature, should have been recorded when the machine was commissioned or last calibrated. Machine axis temperature compensation will not be performed (even when 'enabled') until this command is successfully called for the axes in question.

Command 472, Temperature Compensation Workpiece Configuration

This command allows the user to define the temperature compensation (or thermal effect compensation) configuration for the workpiece. Workpiece temperature compensation will not be performed (even when 'enabled') until this command is successfully called.

Command 473, Temperature Compensation General Configuration

This command allows the user to define a number of general temperature compensation parameters.

Command 476, Temperature Compensation Read Current Configuration

This command can be called at any time to determine the current configuration of the temperature compensation settings.

3.2 Status monitoring commands

Command 474, Temperature Compensation Alarm Enable

This command allows the user to enable or disable the three different kinds of temperature compensation alarm (see appendix). Compensation is still possible without calling this command. The temperature compensation alarms default to all off.

Command 475, Temperature Compensation Read Alarm Status

This command should be called whenever a temperature compensation alarm is activated (i.e. when bit 7 of status byte 5 is set). It allows the user to determine further details about the alarm raised. This includes its type, axis (or workpiece) involved and which sensors caused the alarm (when this can be attributed). Multiple alarms can be indicated simultaneously. Note that this command will continue to show alarms as active, even after they have been disabled, if the condition causing the alarm remains present.

Command 477, Temperature Compensation Read Current Contribution

This command can be called at any time to determine the current contribution (in mm or inches) that the temperature compensation corrections are making to each of the machine axis readings. It also reports the current average temperature that is being used for the axis or workpiece in question in order to make the calculation.

3.3 Averaging

Command 478, Temperature Compensation Sensor Averaging

This command allows the user to enable and disable averaging of the temperatures read from the active temperature channels over a user-definable period in order to reduce the effect of noise on temperature compensation. If enabled, averaging will also be applied to temperatures read directly from the TEC card using the latch and read temperature commands (437 and 438).

3.4 Calibration offsets

Command 479, Temperature Compensation Channel Offsets

This command allows a user-definable offset to be added to the temperatures read from the active temperature channels in order to allow fine-tuning of the system calibration. If defined the offsets will also be applied to temperatures read directly from the TEC card using the latch and read temperature commands (437 and 438). The default offset for each channel is 0.0 °C (0.0 °F) See section 3.5 for further details.

3.5 Discrete temperature reading commands

NOTE: Discrete temperature readings taken using these commands will also have averaging and offsets applied as described in sections 3.3 and 3.4 above.

Command 437, Temperature sensor interface, latch temperature

Command 438, Temperature sensor interface, read data and status

These commands start the temperature reading process, as follows:

- 1 The host computer issues a 'temperature sensor interface, latch temperature command (437), specifying the temperature channel to be read.
- 2 The controller sets status byte 5 bit 2, the TSI (TEC) response ready for host to read flag, to 0.
- 3 The controller and TSI (TEC) board read the specified sensor and calculate the temperature.
- 4 The controller sets status byte 5, bit 2, the TSI (TEC) response ready for host to read flag, to 1.
- 5 The host detects this flag when using a 'Read Position and Status' command (276, etc).
- 6 At some time the host will issue a 'Temp Sensor I/F, Read Data and Status' command (438).
- 7 The controller will reply with the data and status for the temperature channel specified in step 1 above.

3.6 Firmware version check

Command 439, Temperature sensor interface, read version

This command will allow the host computer to read the release number of the firmware installed in the temperature sensor interface daughtercard.

3.7 Definition of entries in the thermal effect compensation TEC file

To enable the UCC1/UCC2 thermal effect compensation system it is necessary to configure the related system default parameters to those appropriate to the installation.

The system configuration parameter locations are listed below:

3.7.1 Machine ini file configuration

Located within the ErrorCorrections section of the machine ini file are two variables that must be configured for the TEC system to operate, these are listed below.

- **MachineThermalEffectCompensationFilePath**

Default setting: The default location for this file is located within the machine subdirectory containing the machine ini file

Input range: Valid file path

Description: This must be the full file path to the machine thermal effect compensation file (.tec).

- **EnableThermalEffectCompensation**

Default setting: 0

Input range: 0 = Thermal effect compensation system off
1 = Thermal effect compensation system on

Description: To activate the thermal effect compensation system

3.7.2 MachineThermalCompTemplate.tec

A template for the .tec file can be found within the machine/default subdirectory. This file should be copied into a specific machine folder and renamed appropriately during installation. This file contains all the start up settings for the thermal effect compensation system.



CAUTION: It is the installers responsibility that this file is modified to the appropriate settings for the installation, failure to do this can result in metrology performance being corrupted.

3.7.3 SystemConfiguration section

- **SensorReadingPeriod**

Default setting: 10

Input range: 1 to 255

Unit of measure: Seconds

Applicable to: Active sensors

Description: Specifies the frequency of data reads from the active sensors for the purpose of thermal effect compensation.

- **ThermalReference**

Default setting: 20

Unit of measure: °C (°F)

Applicable to: All compensation calculations

Description: All thermal effect compensation corrections are made with respect to this temperature.

- **RangeAlarmLowerThreshold**

Default setting: 16

Unit of measure: °C (°F)

Applicable to: Active axis sensors

Description: This is the lower range threshold. If the alarm is enabled when the temperature falls below this temperature the range alarm will be activated (bit 7 of status byte 5). Refer to appendix for further information.

- **RangeAlarmUpperThreshold**

Default setting: 28

Unit of measure: °C (°F)

Applicable to: Active axis sensors

Description: This is the upper range threshold. If the alarm is enabled when the temperature rises above this temperature the range alarm will be activated (bit 7 of status byte 5). Refer to appendix for further information.

- **GradientAlarmEnable**

Default setting: 0 (off)

Input range: 0 = off; 1 = on

Applicable to: Active sensors

Description: This parameter configures the UCC1/**UCC2** temperature system gradient alarm. Refer to appendix for further information.

- **TemporalAlarmEnable**

Default setting: 0 (off)

Input range: 0 = off; 1 = on

Applicable to: Active sensors

Description: This parameter configures the UCC1/**UCC2** temperature system temporal alarm. Refer to appendix for further information.

- **RangeAlarmEnable**

Default setting: 0 (off)

Input range: 0 = off; 1 = on

Applicable to: Active axis sensors

Description: This parameter configures the UCC1/**UCC2** temperature system range alarm. Refer to appendix for further information.

- **AveragingPeriod**

Default setting: 10

Input range: 1 to 255

Unit of measure: Seconds

Applicable to: Sensor readings

Description: This is the time period over which the system averages each temperature reading from each connected sensor. When 'AveragingEnabled' is set to '1' this period can be specified up to a maximum of 255 seconds (in steps of 1 second). This value will be rounded to the nearest second if necessary. A setting of '0' is equivalent to disabling averaging.

- **AveragingEnable**

Default setting: 1

Input range: 0 = off ; 1 = on

Applicable to: Sensor readings

Description: This allows enabling and disabling of the averaging of the temperature data read from the active channels. If enabled, averaging will also be applied to temperatures read directly from the TEC card using the latch and read temperature commands (437 and 438).

NOTE: Averaging is recommended whilst using the system, to prevent discrete corrections during temperature compensation.

- **SensorEquipmentType**

Default setting: 1

Input range: 0 = No system detected
1 = Renishaw TEC system present
2 = Serial interface 1 (see section 3.7.8)

Description: The SensorEquipmentType refers to the type of sensors being used. In addition to the Renishaw sensors it is possible to use alternative sensors with the UCC1 / **UCC2** via the RS232, channel 3 port, on the RS232 daughter card.

3.7.4 ChannelAssignment

This section assigns the location of the temperature sensors mounted on the CMM in software.



CAUTION: Each of the 24 hardware channels available on the temperature card must be assigned a valid location. These locations are then used to obtain the temperatures required for thermal effect compensation.

All channels default to NOTHING.

Possible assigned locations are:

- **NOTHING:** The thermal effect compensation daughtercard does not have a temperature sensor attached or can be used to disable the channel.
- **XSCALE:** The reading from this sensor will be included in the X axis mean temperature calculation.
- **YSCALE:** The reading from this sensor will be included in the Y axis mean temperature calculation.
- **ZSCALE:** The reading from this sensor will be included in the Z axis mean temperature calculation.
- **DUALSCALE:** The reading from this sensor will be included in the dual scale axis mean temperature calculation.
- **WORKPIECE:** The thermal effect sensor will be included in the workpiece mean temperature calculation.

3.7.5 X/Y/Z/Dual Axis

This section assigns the configuration for the respective axis thermal effect compensation

- **ExpansionCoefficient**

Default setting: 0

Unit of measure: PPM/°C (PPM/°F)

Applicable to: Axis

Description: The value for the thermal expansion coefficient for the axis scale should be obtained from the CMM manufacturer.



CAUTION: Extra care should be taken to enter the correct coefficients of expansion during installation. Incorrect coefficients may cause unexpected machine movements.

- **CalibrationTemperature**

Default setting: 20

Unit of measure: °C (°F)

Applicable to: Axis

Description: This is the temperature that this axis was actually calibrated at (not the nominal temperature). The calibration must have been performed without any thermal effect compensation enabled.

- **GradientAlarmThreshold**

Default setting: 1

Unit of measure: °C (°F)

Applicable to: Axis

Description: Allows differences between individual sensor readings on the axis in question to be compared against each other. For differences above the defined threshold, an alarm is raised (bit 7 of status byte 5), if enabled.
Refer to appendix for further information.

- **TemporalAlarmThreshold**

Default setting: 0.1

Unit of measure: °C/min (°F/min)

Applicable to: Axis

Description: Allows averaged sensor readings for the axis in question to be compared against previous readings. For rates of change above the defined threshold, an alarm is raised (bit 7 of status byte 5), if enabled.
Refer to appendix for further information.

- **TemporalAlarmWindowFactor**

Default setting: 0.1
Input range: See note 1 (page 25)
Applicable to: Axis
Description: See note 1 (page 25)
Refer to appendix for further information.

- **ThermalDriftReferencePoint**

Reserved for future system use.

3.7.6 Workpiece

- **ExpansionCoefficient**

Default setting: 0
Unit of measure: PPM/°C (PPM/°F)
Applicable to: Workpiece
Description: The value for the thermal expansion coefficient for the workpiece must match that of the workpiece material currently being measured.



CAUTION: Incorrect coefficients may cause unexpected machine movement.

- **GradientAlarmThreshold**

Default setting: 1
Unit of measure: °C (°F)
Description: Allows differences between individual sensor readings on the axis in question to be compared against each other. For differences above the defined threshold, an alarm is raised (bit 7 of status byte 5), if enabled.
Refer to appendix for further information.

- **TemporalAlarmThreshold**

Default setting: 0.1
Unit of measure: °C/min (°F/min)
Applicable to: Workpiece
Description: Allows averaged sensor readings for the workpiece in question to be compared against previous readings. For rates of change above the defined threshold, an alarm is raised (bit 7 of status byte 5), if enabled.
Refer to appendix for further information.

- **TemporalAlarmWindowFactor**

Default setting:	0.1
Input range:	See note 1 below
Unit of measure:	Refer to appendix
Applicable to:	Workpiece
Description:	See note 1 below Refer to appendix for further information.

NOTE 1: This parameter is used to help calculate the rolling window of time over which the temporal alarm conditions are analysed. It should be set approximately to the uncertainty expected in the temperature measurement system (in °C (°F)) due to effects such as noise and resolution limitations. This is necessary to average out insignificant temperature changes and prevent false triggers of the alarms. The formula below shows how this factor is used in the software to calculate the time window used for the temporal alarm analysis:

$$\text{Window (minutes)} = \frac{\text{TemporalAlarmWindowFactor} \times 4}{\text{TemporalAlarmThreshold}}$$

The default TemporalAlarmThreshold (0.1 °C/minute, equivalent to 6 °C/hour) and the default TemporalAlarmWindowFactor (0.1) would give a window of 4 minutes. Any high frequency noise on the system over this period would not trigger the alarm. However, an average change in temperature of 0.1 °C/minute (e.g. 0.4 °C over the 4 minute period) would trigger the alarm at the end of the window period.

- **thermalDriftReferenceX**

Reserved for future system use.

- **thermalDriftReferenceY**

Reserved for future system use.

- **thermalDriftReferenceZ**

Reserved for future system use.

3.7.7 ChannelOffsets

Default setting:	0.0
Input range:	± 10.0
Unit of measure:	°C (°F)
Description:	The channel offsets section allows fine tuning of all the temperature sensors connected to the system, permitting calibration for each sensor to a common temperature.

3.7.8 SerialInterface1

SerialInterface1 allows use of the Renishaw TEC system by using 3rd party sensors with UCC1 / UCC2. These sensors can be connected to the UCC via the RS232, channel 3 port, on the RS232 daughter card. Raw temperature data can be passed to the UCC where the compensation takes place.

NOTE: If the serial interface is being used as an input for the 3rd party sensors then it is important that a TEC daughtercard is NOT fitted. The operating software recognises the presence of a TEC daughtercard and if one is fitted it will only accept temperature compensation inputs from that source.

4 System accuracy and calibration

The TEC system can be used without calibration. However, the system performance can be improved by calibrating each of the sensors used. To compensate each channel individually, an offset may be entered in the TEC file. Without calibration the system accuracy is ± 0.2 °C. Calibrating the system will enhance this.

It is recommended that the calibration process is coherent with the expected machine or workpiece temperature variation. For example, if the machine is used in a room at 20 °C \pm 2 °C with an acclimatised workpiece, the calibration could be a single temperature measurement per sensor.

Calibrating the thermal effect compensation axis sensor can be avoided if the axis temperature is recorded during the linear mapping of the axis. This scale temperature is then introduced in the TEC file. An alternative but more time consuming method consists of calibrating the axis sensors and mapping the scale back to a scale error at 20 °C. In this case, the reference scale temperature in the TEC file is 20 °C.

5 Operation

5.1 Using the thermal effect compensation (TEC) system

The thermal effect compensation daughtercard measures the electrical resistance of each of the sensors. This resistance is then converted to temperature by the card and reported to the UCC software. The UCC software can then apply the appropriate thermal compensation.

System features include:

- Detecting if a sensor is connected or if a channel is open circuit. In this case the affected channel will default to the thermal reference (see section 3.7.3).
- Detecting if a channel is faulty or short circuited.
- Accepting a maximum of 24 sensors. This can be any combination of workpiece and axis sensors.
- Temperature readings for each channel can be read by the user.
- Workpiece and axis material thermal coefficients of expansion can be input by the user.
- The user has the ability to turn on/off machine and/or workpiece thermal effect compensation.
- The user has the ability to specify units (e.g. °C/°F, mm/in).



CAUTION: Care should be taken when entering parameters in the TEC file that these are in the correct units.

- The user can set predefined alarms to warn the user of the following:
 - if the temperature exceeds the expected range.
 - if the temperature (measured) of one sensor on any axis is significantly greater than the other sensors on that axis.
 - if the temperature changes too quickly across any axis or workpiece.
- Averaging can be applied to the temperature reading to smooth the data (recommended).
- The user can enter offsets for a more accurate CMM calibration.
- The TEC system takes an average reading of the sensors on each axis / workpiece

5.2 Best practise for using the thermal compensation system

5.2.1 General

- After installation, a system calibration, as described in section 4, should be conducted. Renishaw recommend that this calibration procedure is repeated every 12 months.
- Ensure the CMM is not subjected to unnecessary changes in temperature, for example, fans blowing, close to radiator, in direct sunlight or any other powerful radiant sources. Excessive humidity should also be avoided.
- Use the system as close as possible to the calibrated temperature.
- Renishaw recommends that workpiece sensors, axis sensors and part attached switches are verified at six month intervals, following the procedure detailed in section 2.5.

5.2.2 Workpiece sensor

- Ensure the workpiece sensor is in full contact with the workpiece.
- If possible, position the workpiece sensor in the middle of the workpiece, or, near where the measurement is taking place.
- Electrically ground workpiece prior to using the thermal effect compensation system to avoid electrostatic discharge (ESD) through the workpiece sensor.
- Use multiple sensors for large workpieces.
- Hold the workpiece sensor by touching its white sleeve. If this is not possible, wait for four minutes, once the sensor is in position, before proceeding to take a measurement.
- Wait a minimum two minutes before measuring once the workpiece sensor is positioned. It is recommended to wait a minimum of three minutes before measuring if there is more than a three degree difference between the current sensor temperature and the workpiece temperature.
- If the optional part attached switch is installed then the user can activate workpiece thermal effect compensation using the switch.

NOTE: It is not recommended to run axis thermal compensation without workpiece compensation (where axes and workpiece are at the same temperature) as this will provide worse results than not using compensation at all.

- Keep the workpiece sensor cabling away from moving sections of the CMM.

5.2.3 Axis sensors

- Ensure the sensors are mounted as close as possible to the axis scales.
- It is recommended to have at least three sensors per axis to account for temperature gradient effects.
- On large, or high specification CMMs, use more than three sensors per axis.
- Thermally conductive glue should be used when gluing axis sensors to an axis.
- All axis sensor cabling must be tightly secured to the axis body to prevent it getting trapped during moves.

6 Appendix


NOTE: These explanations all assume that the UCC1/**UCC2** system is set to mm/°C.

6.1 Explanation of range alarm

Shown below is a graphical representation of how the range alarm operates within the UCC1/**UCC2** thermal effect compensation system

The range alarm operates on all axis sensors, one sensor exceeding the specified range will cause the range alarm to be activated. The graph below shows an example of range alarm functions:

NOTE: The range alarm is not applied to workpiece sensors.

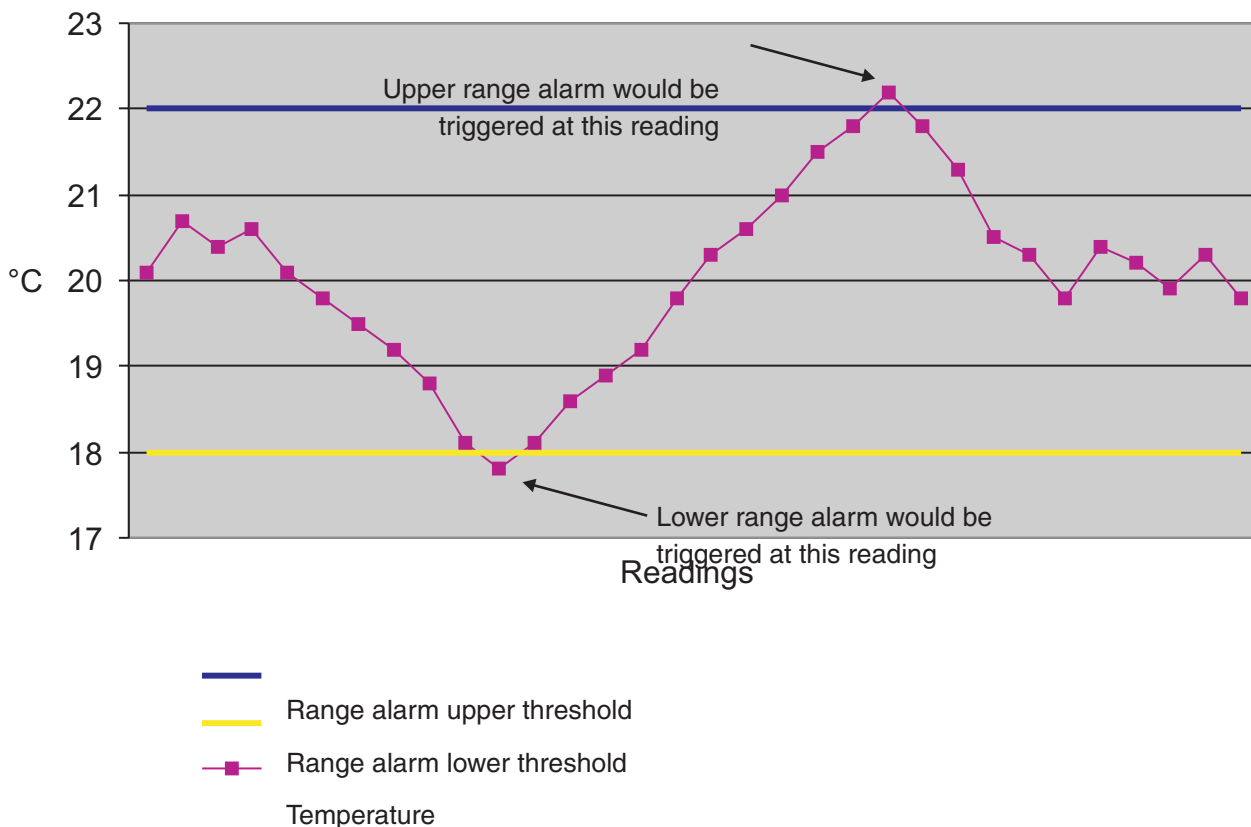

The default setting for the lower threshold is 16 °C.

The default setting for the upper threshold is 28 °C.


The range alarm default is set to off.

6.2 Explanation of gradient alarm

Shown below is a graphical representation of how the gradient alarm system operates within the UCC1/UCC2 thermal effect compensation system.

The gradient alarm has one threshold per axis. The example below shows three sensors, as could be fitted to a machine axis, and a GradientAlarmThreshold of 1.

The GradientAlarmThreshold means that these three thermal effect compensation sensors can have a maximum temperature variation of 1 degree, if the variation between any two sensors exceed this the gradient alarm will be activated. The graph below shows an example of gradient alarm functions:

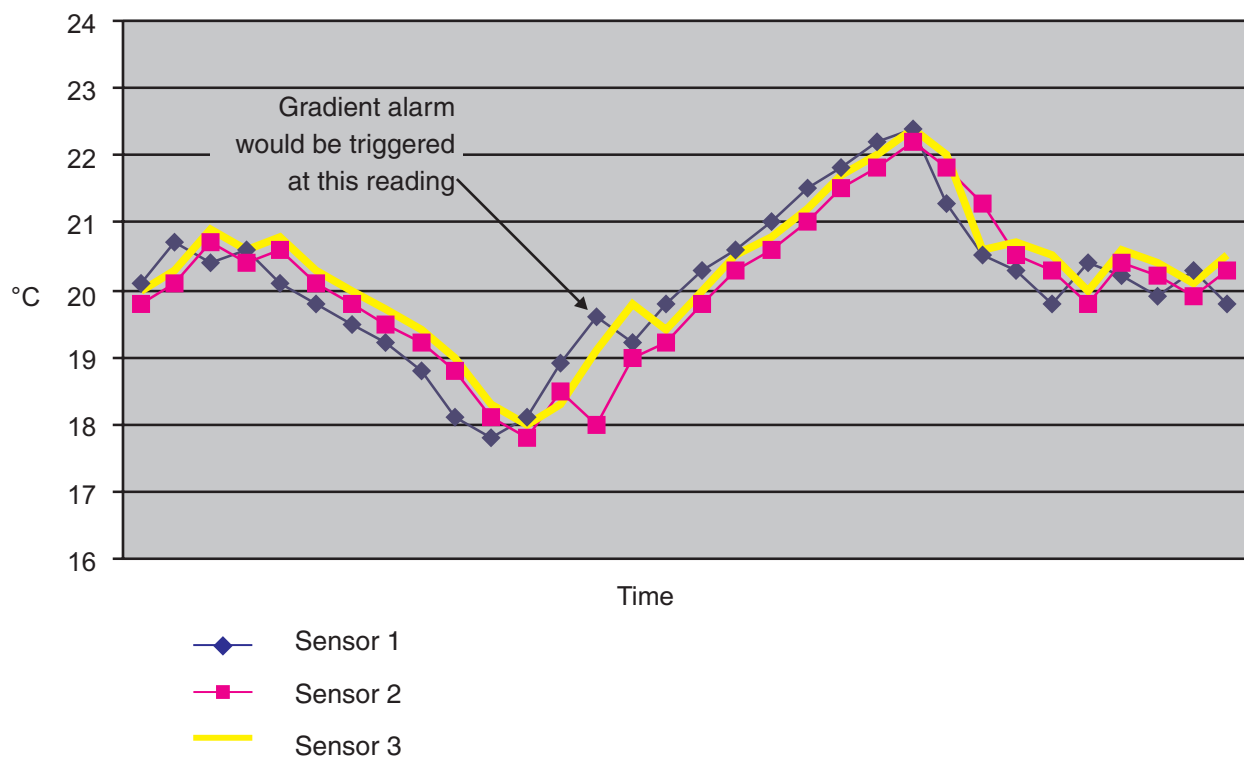

The gradient alarm range can be configured individually for any axis or any workpiece.

The gradient alarm default is set to off.

6.3 Explanation of temporal alarm

The following section gives examples of how the temporal alarm system operates within the UCC1/UCC2 thermal effect compensation system. The temporal alarm works on two readings separated by the time period, not a calculated increase in temperature over time.

Time period

The time period that the system operates within is calculated using the following formula:

$$\text{Time period (minutes)} = \frac{\text{TemporalAlarmWindowFactor} \times 4}{\text{TemporalAlarmThreshold}}$$

Using the system default settings (TemporalAlarmThreshold = 0.1, TemporalAlarmWindowFactor = 0.1) the time period will be :

$$4 \text{ minutes} = \frac{0.1 \times 4}{0.1}$$

The system will take one reading and then a second reading four minutes after that.

Temperature threshold

The threshold for the alarm is calculated using the following formula:

$$\text{TemperatureThreshold} = \text{TemperatureAlarmThreshold} \times \text{TimePeriod}$$

Using the system default settings the TemperatureThreshold will be:

$$0.4 \text{ } ^\circ\text{C} = 0.1 \times 4$$

Therefore, using the default settings, the two temperature readings taken four minutes apart must have a minimum separation of 0.4 °C to trigger the threshold alarm.

Example 1


Event #1 in the diagram below shows a temporal change of 1.5 °C in time period (T₁) and 0 °C in time period (T₂).

If time period T₁ was used with the default system the temporal alarm would have been activated

If time period T₂ was used the temporal alarm would have not been activated even though the system did have a period of time when the temporal change was in excess of the specified .

Event #2 in the diagram below shows a temporal change of 1.5 °C in time period (T₃) and 3 °C in time period (T₄).

If time period T₃ or T₄ was used with the default system the temporal alarm would have been activated.

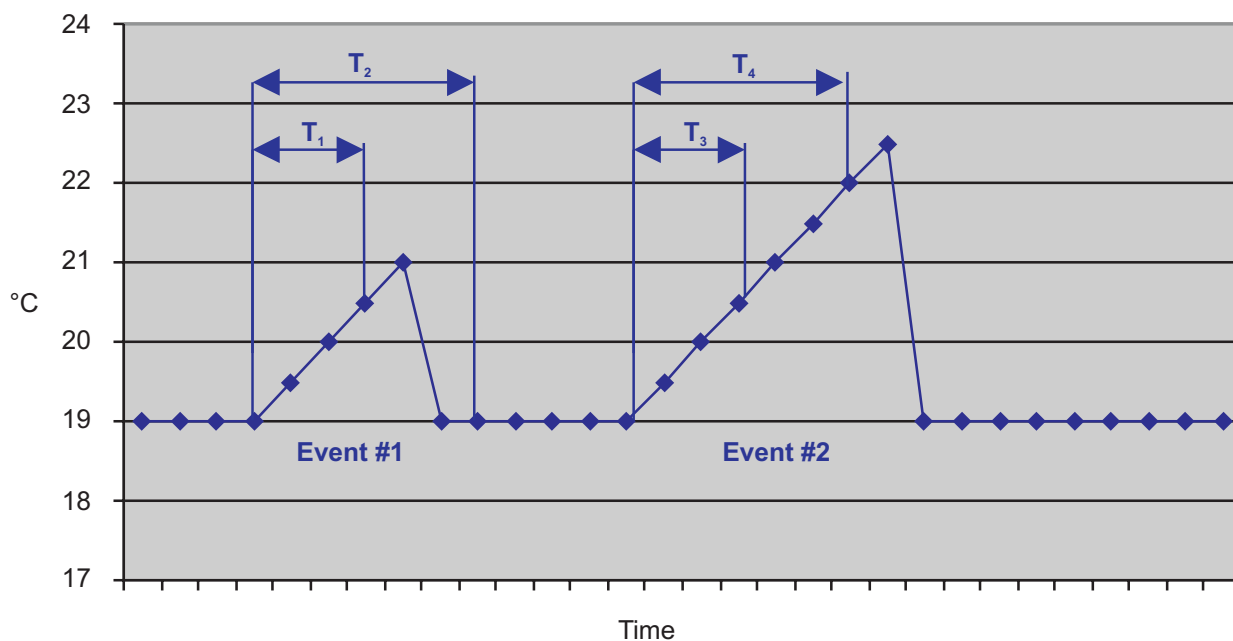

Example 2

The temporal alarm is required to detect when a sensor temperature has changed by greater than 4 °C over a time period of 40 minutes (therefore time period = 40 minutes).

Set the TemporalAlarmThreshold:

$$\frac{4 \text{ }^{\circ}\text{C}}{40 \text{ minutes}} = 0.1 \text{ }^{\circ}\text{C}/\text{min}$$

Therefore TemporalAlarmThreshold = 0.1 °C/min

Set the TemporalAlarmWindowFactor:

$$40 \text{ minutes} = \frac{\text{TemporalAlarmWindowFactor} \times 4}{0.1}$$

Therefore, TemporalAlarmWindowFactor = 1

Renishaw plc
New Mills, Wotton-under-Edge,
Gloucestershire, GL12 8JR
United Kingdom

T +44 (0)1453 524524
F +44 (0)1453 524901
E uk@renishaw.com
www.renishaw.com

RENISHAW 
apply innovation™

**For worldwide contact details,
please visit our main website at
www.renishaw.com/contact**



H - 1000 - 5105 - 01