

Retrofit desk shelf assembly instructions


www.renishaw.com/cmmretrofit



Kit contents	Part no.	Description	Quantity
Shelf top	M-5567-1627	Top of retrofit shelf assembly	1
Shelf extension legs	M-5567-1626	Legs to attach shelf to desk	2
Shelf top/leg screws	P-SC72-0002	To secure shelf top to shelf legs	6
Shelf leg/desk bolts	P-SC01-0660	To secure shelf legs to desk assembly	4
Shelf leg/desk nuts	P-NU01-0060	To secure shelf legs to desk assembly	4
Shelf leg/desk bolt washers	P-WA01-0060	Washer for shelf leg/desk screws	4


1

Secure the desk top (M-5567-1627) to the desk legs (M-5567-1626) using the screws supplied (P-SC72-0002)

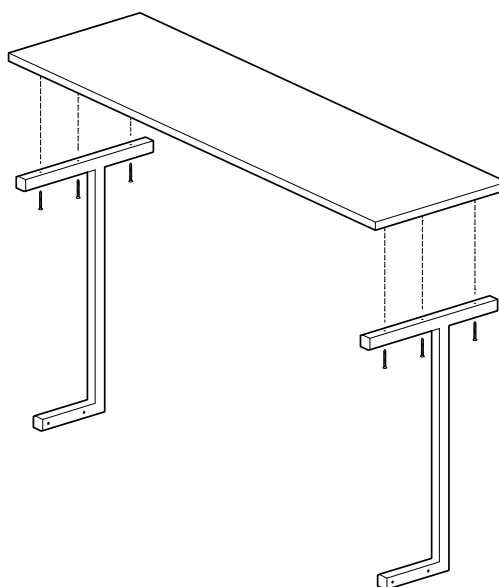


2

Insert the desk legs (M-5567-1626) into the correct location at the back of the top of the desk assembly

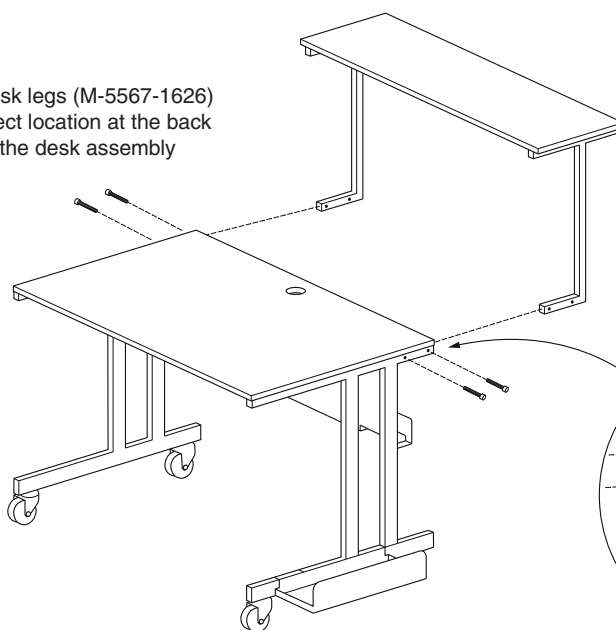

Secure the desk legs (M-5567-1626) to the desk assembly using the fixing screws (P-SC01-0660), washers (P-WA01-0060) and nuts (P-NU01-0060) supplied

Please note that washers go inside of shelf legs next to nut

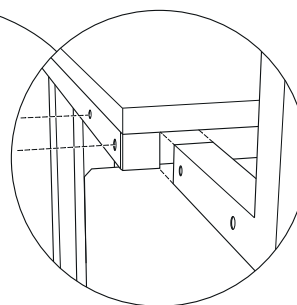

For worldwide contact details, please visit our main web site at www.renishaw.com/contact